


OPERATING INSTRUCTIONS

START

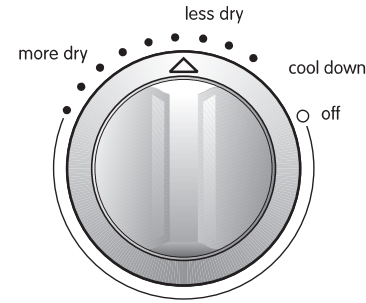

Versión en español

Si desea obtener una copia en español de estas Instrucciones de Funcionamiento, sírvase escribir la dirección que se incluye a continuación. Solicite la P/N 131870000.

Spanish Owner's Guides
Frigidaire Home Products
P. O. Box 212378
Augusta, GA 30917

Before Operating Your Dryer

Read your dryer Owner's Guide. It has important safety and warranty information. It also has many suggestions for obtaining the best drying results.

⚠ WARNING To reduce the risk of fire, electric shock, or injury to persons, read the IMPORTANT SAFETY INSTRUCTIONS in your dryer Owner's Guide before operating this appliance.

Operating Steps

Read Drying Procedures in your Owner's Guide. It explains these operating steps in detail.

1. **Prepare items for drying.**
2. **Check that lint screen is clean and properly in place.**
3. **Place wash load into dryer.** Add a dryer fabric softener sheet if desired.
4. **Close dryer door.** Door must be closed before dryer will operate.
5. **Turn cycle selector clockwise to desired setting.** See **Control Settings Chart** on reverse side.
6. **Push Start button for 2 seconds.**
7. **At end of cycle, remove items immediately and hang or fold.**
8. **Clean lint screen after every load.**

Cycle Settings

Turn the cycle selector clockwise to the desired dryness setting.

Your dryer has an automatic dry cycle recommended for drying regular and permanent press items that can be tumble dried at high heat.

Drying time is determined automatically. When the items are dry, the heat automatically turns off and the load is tumbled for approximately 4 minutes without heat. This cool down period reduces wrinkling and makes items easier to handle during unloading. To help reduce wrinkling, remove items immediately and hang or fold.

For items requiring more drying time, set the cycle selector on **More Dry**. For items requiring less drying time, set the cycle selector on **Less Dry**.

The **Cool Down** setting provides up to 4 minutes of tumbling without heat. Use Cool Down to freshen clothing, pillows or blankets or to dust draperies. Heat-sensitive items such as plastics, foam rubber or similarly textured rubber-like materials or items containing feathers or down should be dried **only** with the Cool Down setting.

Drying time varies depending on size and dampness of load, weight and fabric type. Room temperature and humidity, type of installation and electrical voltage can also affect drying time.

Refer to the **Control Settings Chart** on reverse side for suggested settings according to fabric type.

Control Settings Chart

Always consult fabric care labels before drying. For items without labels, follow suggested settings below. The suggested drying times are approximate. Actual time needed will vary depending on size and dampness of load, weight and fabric type. Room temperature and humidity, type of installation and electrical voltage or gas pressure can also affect drying time. Items dried in a dryer operating on a 208 volt circuit instead of a 240 volt circuit require 20% more drying time than listed. **⚠WARNING To avoid fire hazard, do not use heat to dry items containing feathers or down, foam rubber, plastics, or similarly textured, rubber-like materials. Use cool down (no heat) setting only.**

TYPE OF LOAD

CYCLE SETTING

Bedspreads, chenille	more dry
Blankets Cotton Electric	more dry <i>Electric blankets can be partially dried in dryer if recommended by manufacturer. Tumble with dry towels to cushion electrical parts. Remove blanket while still damp. Finish drying by hanging across two parallel lines or rods. Block to original dimensions. Follow label instructions. Place on flat surface and gently stretch to block to original dimensions.</i>
Wool Synthetics or blends	more dry less dry
Cottons, linens Full dry Damp dry, for ironing	more dry less dry
Curtains Cottons or cotton blends Sheer synthetics Heavy synthetics To freshen all types	<i>Dry in small loads. Remove as soon as dryer stops.</i> more dry less dry less dry cool down
Delicates - sheer lingerie and blouses, nylon items, washable silk and washable rayon	less dry
Glass fiber	<i>Do not dry glass fiber items in dryer unless recommended by manufacturer. Small glass particles left in the drum can be picked up by the next load and may cause skin irritation.</i>
Items containing elastic	less dry. <i>Remove while elastic is still damp.</i>
Items to be fluffed, freshened or dusted	cool down
Knits Cotton or cotton blends Synthetics Wool	more dry less dry See manufacturer's care label.
Permanent Press 100% cotton 100% synthetics and blends	<i>Remove immediately. Hang or fold.</i> less dry less dry
Pillows	See ⚠WARNING above. <i>Add several dry bath towels to absorb excess moisture. Use cool down. Repeat procedure until items are dry.</i>
Plastics	See ⚠WARNING above. <i>Add several dry bath towels to absorb excess moisture. Use cool down. Repeat procedure until items are dry.</i>
Rugs (4'x6')	See ⚠WARNING above. <i>See manufacturer's care label.</i>
Slipcovers	<i>Select setting according to fabric. Remove when slightly damp.</i>
Table linens, damp dry for ironing	less dry
Tennis shoes	<i>Always consult care labels when drying tennis shoes. Improper care can permanently damage some shoes. Air dry.</i>
Wrinkled, but not soiled, permanent press or knit items	less dry <i>Remove items immediately and hang or fold.</i>