
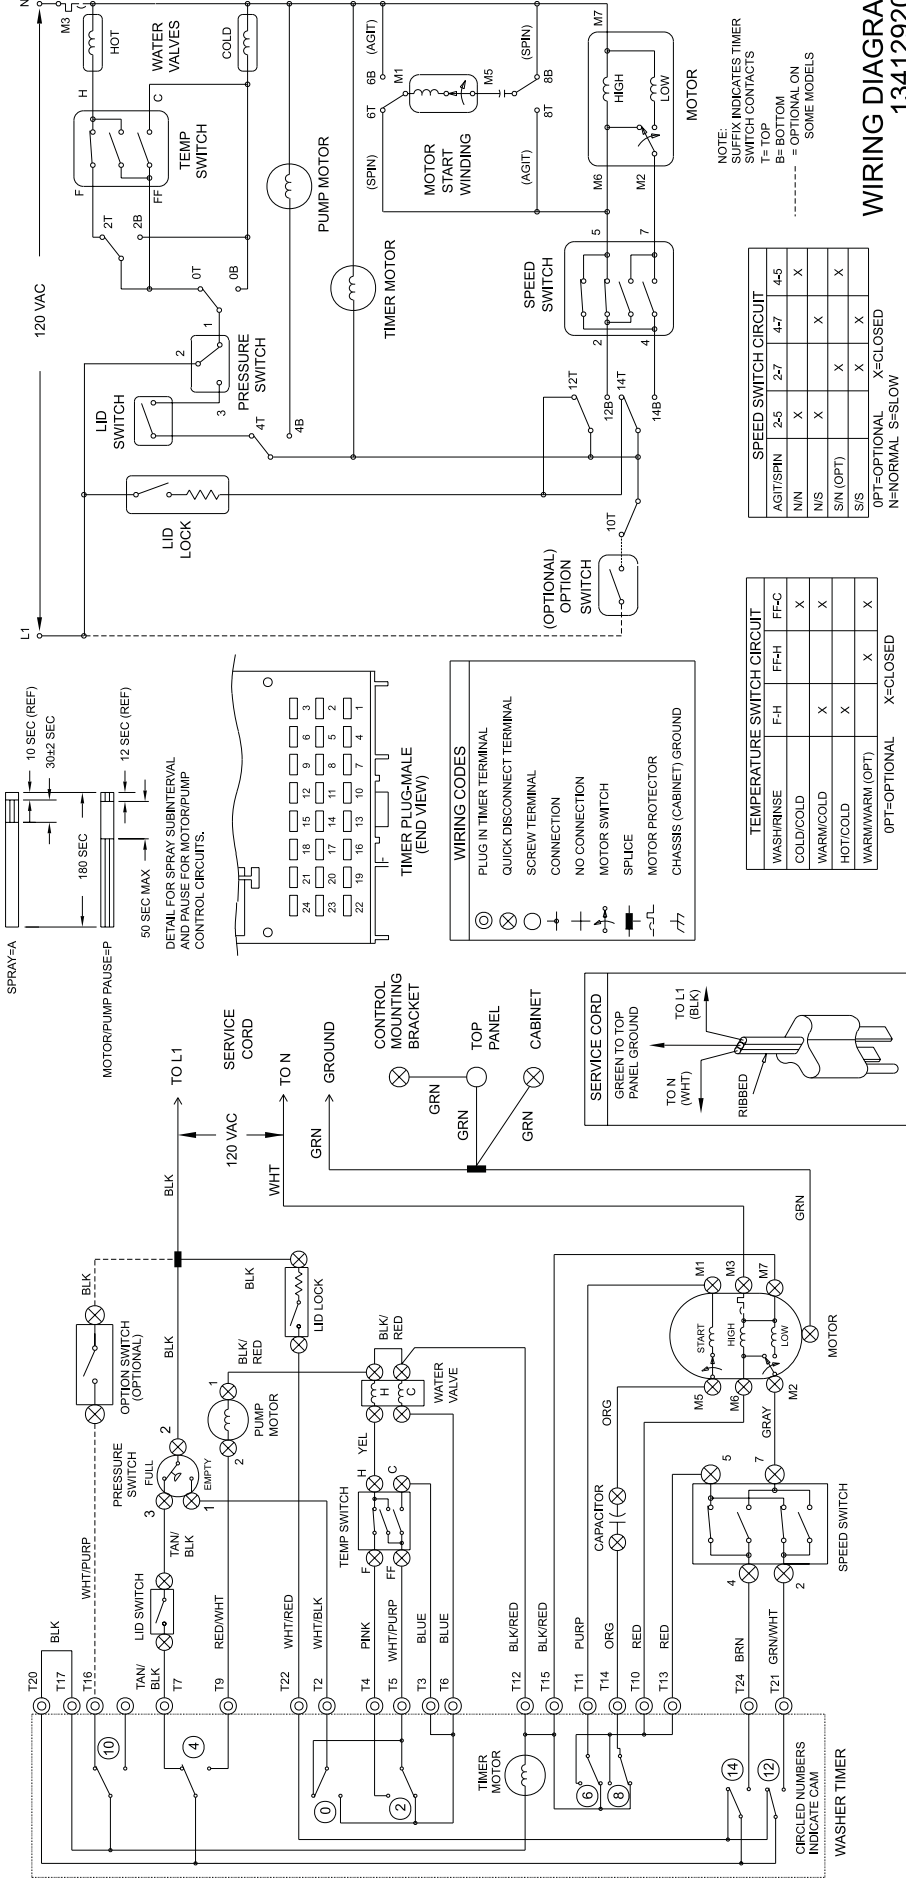


CAUTION: DISCONNECT ELECTRIC CURRENT BEFORE SERVICING

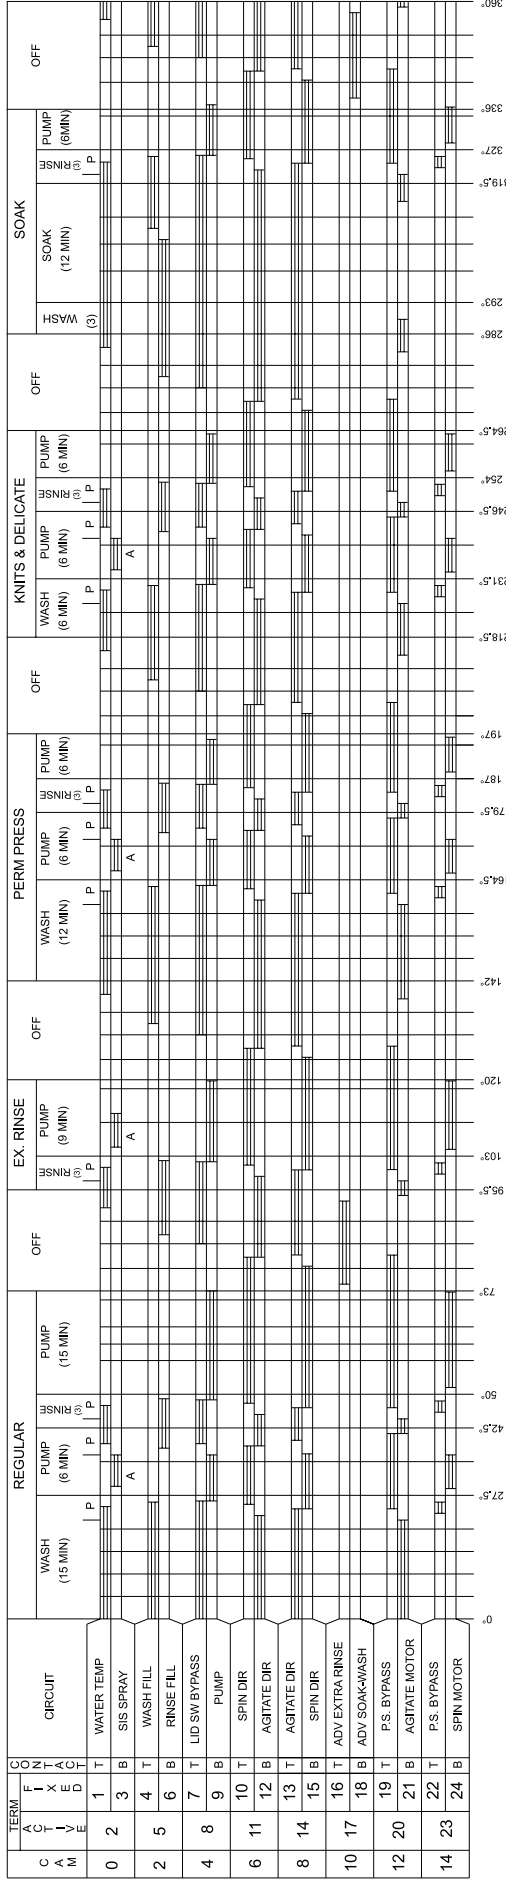

NOTE:
SUFFIX INDICATES TIMER SWITCH CONTACTS
F=TOP
B=BOTTOM
-----=OPTIONAL ON SOME MODELS

SPEED SWITCH CIRCUIT				
AGIT/SPIN	2-5	2-7	4-7	4-5
N/N	X	X	X	X
N/S	X	X	X	X
S/N (OPT)	X	X	X	X
S/S	X	X	X	X

OPT=OPTIONAL X=CLOSED
N=NORMAL S=SLOW

TEMPERATURE SWITCH CIRCUIT				
WASH/RINSE	F-H	FF-H	FF-C	
COLD/COLD	X	X	X	
WARM/COLD	X	X	X	
HOT/COLD	X	X	X	
WARM/WARM (OPT)	X	X	X	

OPT=OPTIONAL X=CLOSED

WIRING DIAGRAM 134129200

CIRCLED NUMBERS INDICATE CMI

WASHER TIMER