


ELECTRONIC OVEN CONTROL GUIDE

Setting the Clock and Minute Timer

NOTE: The basic timer is externally arranged in different configurations in various appliance models, this does not change the way it operates.

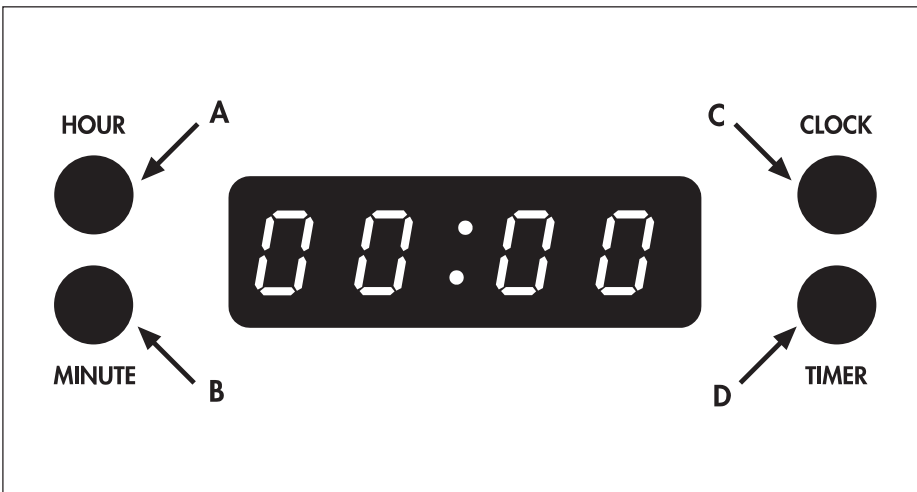

To Set the Clock

When the appliance is first plugged in, or when the power supply to the appliance has been interrupted, "12:00" will flash in the display window.

1. Push in button **A** (HOUR) until the correct hour appears in the display. The numbers only count forward.
2. Push in the button **B** (MINUTE) until the correct minutes appear in the display.

To Set the Minute Timer

1. Press button **D** (TIMER). "0:59" (59 minutes) will appear in the display window.
2. The minute timer can be set for any amount of time from 1 minute to 1 hour and 59 minutes. To set a time less than 59 minutes, push in and hold button **B** (MINUTE) until the correct minutes appear in the display. The minute timer will automatically start when the button is released. To set a time more than 59 minutes, push button **A** (HOUR). The display window will show 1 hour 59 minutes. To reduce the time, press and hold button **B** (MINUTE) until the correct time appears in the display.
3. When the set time has passed, the control will display "0:00" and beep continuously. Press button **C** (CLOCK) to cancel the timer and return to the clock mode.
4. To cancel the set time before the countdown has finished, press button **C** (CLOCK).

Versión en español

Si desea obtener una copia en español de este Manual, sírvase escribir a la dirección que se incluye a continuación. Solicite la P/N 318201107.

Spanish Owner's Guides
Frigidaire Company
P.O. Box 9061
Dublin, Ohio 43017-0961