

COLORS / COLOR / COULEURS



BK- BLACK/NEGRO/NOIR
 W- WHITE/BLANCO/BLANC
 O- ORANGE/NARANJA/ORANGE
 BR-BROWN/MORENO/BRUN
 PK-PINK/ROSA/ROSE
 V- VIOLET/VIOLETA/VIOLET
 G- GREEN/VERDE/VERT
 R- RED/ROJO/ROUGE
 Y- YELLOW/AMARILLO/JAUNE
 BL- BLUE/AZUL/BLEU
 BR/W-BROWN/WHITE // MORENO/BLANCO // BRUN/BLANC
 BL/W-BLUE/WHITE // AZUL/BLANCO // BLEU/BLANC

CODE / CODIGO / CODE

CODE	GAUGE/MED. CALIBRE	TEMP. °C	CSA	STYLE	UL
1	18	125	CL 1251	3173	
2	16	125	CL 1251	3173	
3	14	125	CL 1251	3173	
4	12	125	CL 1251	3173	
5	18	150	EXL-150	3321	
6	16	150	EXL-150	3321	
7	14	150	EXL-150	3321	
8	12	150	EXL-150	3321	
9	10	150	EXL-150	3321	
10	18	200	SEW-1	3122	
11	16	200	SEW-1	3122	
12	12	250		3252	
13	16	250		3252	
14	20	150	EXL-150	3321	
15	8	150	EXL-150	3321	
16	8	60			
17	10	60			

EXAMPLE/EJEMPLO/EXEMPLE: (R-8)*

- WHEN USING 4000 W. BROIL ELEMENT
- CUANDO SE USA 4000 W. ELEMENTO DE ASADO
- QUAND UTILISE AVEC 4000 W. ELEMENT GRILLAGE

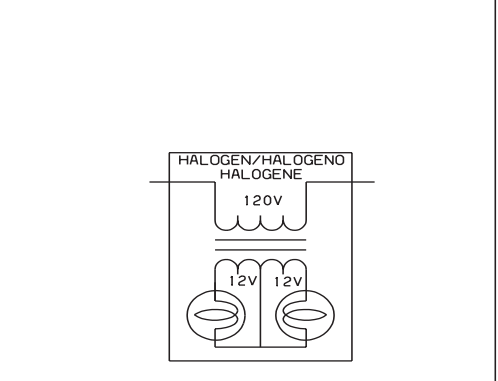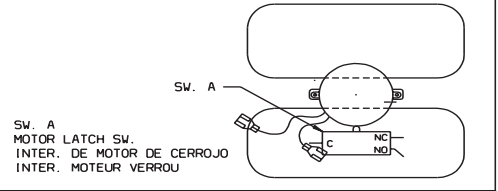

CAUTION: DISCONNECT POWER BEFORE SERVICING UNIT.
ATENCION: CORTAR EL CORRIENTE ANTES DE REALIZAR EL MANTENIMIENTO DEL ELECTRODOMESTICO.
ATTENTION: COUPEZ L'ALIMENTATION AVANT D'EFFECTUER LA REPARATION.

318046119 REV. A