



# Models 84072/94072 DRYER OPERATING INSTRUCTIONS

## Before Operating Your Dryer

**Read your dryer Use and Care Guide.** It has important safety and warranty information. It also has many suggestions for best drying results.



**WARNING** To reduce the risk of fire, electric shock or injury to persons, read the **IMPORTANT SAFETY INSTRUCTIONS** in your dryer Use and Care Guide before operating this appliance.

## Operating Steps

Read "Drying Procedures" in your Use and Care Guide. It explains these operating steps in detail.

1. Prepare items for drying.
2. Check that lint screen is clean and in place.
3. Load the dryer. If desired, add a dryer fabric softener sheet. Close the door.
4. Press **CYCLES** until desired cycle is selected. Suitable drying temperature, dryness level and options will automatically be displayed. To change these settings, press **TEMPS, DRYNESS** and **OPTIONS** until the desired selections are made. Those adjustments to the cycle will automatically be remembered each time that cycle is selected.
5. To select or delete Soft Heat, Wrinkle Rid and Air Fluff/No Heat, press **OPTIONS** until the flashing light indicates a desired option. Then press **SELECT** to add or delete the option.

6. If you wish to return to the factory settings, press and hold "**CYCLES**" and "**OPTIONS**" at the same time for 5 seconds and release. The display will show two dashes for a few seconds indicating that the factory settings have been selected.

**Note:** To provide the best care for your laundry items, not all temperatures, dryness levels and options are available with all cycles.

7. Add desired features by pressing symbols for
  - Control Lock
  - End-of-Cycle Signal
  - Time Dry
8. Press **START** to begin cycle.
  - To pause the cycle, press **STOP/CLEAR** once. "PAU" will flash alternately with the time remaining display. To resume the cycle, press **START** again.
  - To stop or clear the cycle, press **STOP/CLEAR** twice.

9. A signal will sound near the end of the cycle and periodically during Wrinkle Rid when the signal option is selected. When the cycle ends, remove items immediately and hang or fold.

10. Clean lint screen after every load.

## Cycle Selection

For best results, follow the fabric care label instructions on items to be dried.

Auto Dry cycles take the guesswork out of drying time. The load will automatically be dried at the selected temperature to the desired dryness level. The dryer senses the moisture level of the load as it tumbles through heated air. Auto Dry cycles save time and energy and protect fabrics.

When the load has reached the selected dryness level, it will continue to tumble, unheated, during a Cool Down period. This helps reduce wrinkling and makes items easier to handle during unloading.

Drying time varies depending on size and dampness of load and fabric type. Room temperature and humidity, type of installation and electrical voltage or gas pressure can also affect drying time.

The following will be displayed during an Auto Dry cycle:

- The Estimated Drying time for the cycle selected will be displayed for approximately 5 minutes.
- The "Ad" is displayed until the Estimated Drying Time for your specific load has been determined.
- The cycle status will change from "Auto Dry" to "Cool Down" while the load is being tumbled without heat.
- "dn" is displayed when the cycle is done.
- If the Wrinkle Rid option has been selected, the load will continue to tumble without heat. The cycle status will change to "Wrinkle Rid" and "dn" will be displayed.

## Normal

Select this Auto Dry cycle for cotton items.

## Quick

Select this Timed Dry cycle to quickly dry a small load made up of just a few items. (Auto Dry is not available with this cycle.)

## Towels

Select this Auto Dry cycle for towel loads.

## Perm Press

Select this Auto Dry cycle for permanent press items.

## Knits / Delicates

Select this Auto Dry cycle for knit and delicate items.

## Touch Up

Select Touch Up to help remove wrinkles from clean and dry items that were not taken from the dryer at the end of the cycle, have been stored in crowded closets or drawers, or unpacked from luggage following a trip. It provides approximately 10 minutes of low heat tumbling followed by a 5-minute cool down period.

### Custom Cycle 1 and 2

Use Custom Cycle to design up to two Auto Dry cycles for specific laundry loads. Select the first cycle, temperature, dryness level and options desired. Then press and hold CUSTOM CYCLE 1 for three seconds until indicator lights up and signal beeps twice. Those settings will be conveniently recalled each time CUSTOM CYCLE 1 is selected in the future. Repeat to program CUSTOM CYCLE 2.

### Cycle Adjustments

A suitable drying temperature and dryness level will automatically be displayed for the cycle selected. To change settings, press TEMPS and DRYNESS until the desired selections are made. These adjustments to the cycle will automatically be remembered each time that cycle is selected.

### Temperature Selection

For best results, follow the fabric care label instructions on items to be dried. Select the temperature setting most suitable for each load.



**WARNING** To avoid fire hazard, do not use heat to dry items containing feathers or down, foam rubber, plastics, or similarly textured, rubber-like materials. Use the Air Fluff-No Heat cycle only.

**High** is recommended for sturdy fabrics.

**Medium** is recommended for wrinkle free, permanent press and lightweight fabrics.

**Medium-Low** is recommended for most knits.

**Low** is recommended for delicate fabrics.

**Note:** To prevent shrinkage, every temperature is not available with every cycle.

### Dryness Selection

Select **Normal Dry** for most loads.

Occasionally a load may seem too damp or overdried at the end of the cycle. To increase drying time for similar loads in the future, select **More Dry**. For loads requiring less drying time, select **Less Dry**.

Select **Damp Dry** for items you wish to partially dry before hanging or ironing. Select the temperature most suitable for the load.

---

**Note:** To prevent over-drying, every dryness level is not available with every cycle.

---

### Cycle Options

Soft Heat and Wrinkle Rid are available with any cycle.

### Soft Heat

As the load tumbles and becomes dryer, the temperature is gradually lowered. This helps prevent shrinkage due to over-drying.

### Wrinkle Rid

If the dried load cannot be removed promptly at the end of the cycle, unheated tumbling continues for approximately 30 minutes to help reduce wrinkling. When the signal is selected, it will beep briefly approximately every 4 minutes as a reminder to remove the load. The dried load can be removed at any time during Wrinkle Rid.

### Air Fluff/No Heat

This option provides up to 30 minutes of tumbling without heat and can only be selected in the Time Dry cycle. Use it to dry items containing feathers or down, foam rubber, plastics or similarly textured, rubber-like materials, to freshen clothing, pillows or blankets, or to dust draperies.

### Dryer Features

#### Control Lock

To prevent accidental operation of the dryer or alteration of the cycle settings, press and hold the lock symbol until you hear 3 beeps and "LOC" is displayed. To cancel, press and hold the lock symbol until "LOC" is no longer displayed.

#### Signal

A signal will sound at the end of the cycle and periodically during Wrinkle Rid. Press the signal symbol to select one of three volume levels or turn off the signal. This selection will be programmed until you change it.

#### Time Dry

Use this feature to manually select the drying time for any load. Select the temperature desired. You will not be able to select a cycle or dryness level.

**NOTE:** Time Dry is required when using the Air Fluff /No Heat option.

Press **TIME DRY** to select 45 minutes of drying time. The time will increase 5 minutes each time **TIME DRY** is pressed. The maximum drying time is approximately 110 minutes. If you desire less than 45 minutes, you must advance beyond the 110 minute mark to start again at 15 minutes.

#### Error Codes

If the dryer stops and the F1, F3, F4 or F5 error code is flashing in the display, press **STOP/CLEAR**, select a cycle and press **START**. If the error code appears again, call for service to correct the problem.

- F1 - There may be an internal problem with the dryer.
- F2 - There may be a problem with the temperature sensor.
- F3 - There may be a problem with the heater system.
- F4 - The dryer may have run too long. Clean the lint filter and be sure the vent is not blocked before calling for service.
- F5 - There may be a problem with the keypad.

# Dryer settings reference chart

AVAILABLE CYCLE SETTINGS - These temperatures, dryness levels and options are available with the following cycles:

	Normal	Quick **	Towels	Perm Press	Knits/Delicates	Touch Up **	Timed Dry
<b>Temperatures</b>							
High	* ✓	* ✓	* ✓				✓
Medium	✓	✓	✓	* ✓	✓		* ✓
Medium-Low	✓	✓	✓	✓	✓		✓
Low	✓				* ✓	* ✓	✓
<b>Dryness Level</b>							
More Dry	✓		* ✓	✓			
Normal Dry	* ✓		✓	* ✓	✓		
Less Dry	✓		✓	✓	* ✓		
Damp Dry	✓			✓	✓		
<b>Options</b>							
Soft Heat	✓		✓	* ✓	* ✓		
Wrinkle Rid	* ✓	✓	✓	* ✓	* ✓	* ✓	✓
Air Fluff-No Heat							✓

\* Factory setting

\*\* Timed Dry cycle only

