


ATTENTION

Configure personality header BEFORE installing replacement control into unit

Directions for control board replacement:

1.) Identify the jumper configuration for the replacement control board. Configuration is located either:

A.) On the Identification Sticker near the control board to be replaced.

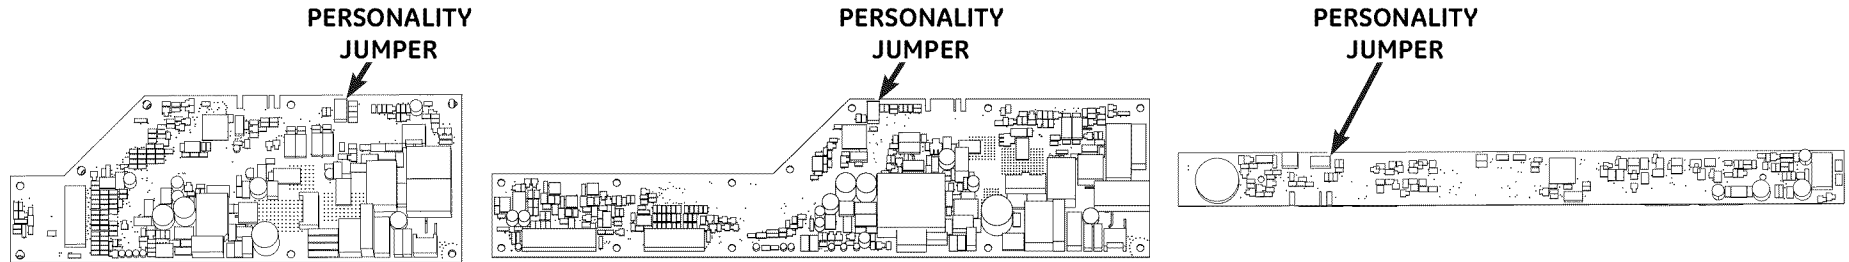

-OR-

B.) On the table located located in this document.

2.) BEFORE installing, verify that the personality jumper setting on the board you are replacing matches the configuration selected in Step 1. If it does not, move accordingly.

NOTE: Keys/buttons and LEDs will not function until an appropriate personality is selected.

3.) Remove protective film on the LCD screen (some models).

4.) Install replacement control into unit.

5.) Validate board functionality.

6.) Insert this document next to the mini manual for reference.

Select the User Interface Appearance which best fits the unit you are servicing.

CONTROL TYPE	USER INTERFACE APPEARANCE	MODEL NUMBER*	USER INTERFACE BOARD JUMPER CONFIGURATION	MACHINE CONTROL JUMPER CONFIGURATION
FRONT		GDF510	NOT PRESENT	
FRONT		GDF520 GDF540 GDF570		NOT PRESENT
TOP		GDT530 ADT521PGF		NOT PRESENT
TOP		GDT535		NOT PRESENT

* Derivative or special models may not be included in the model table.
Select jumper configuration based off Identification Sticker in unit or closest User Interface Appearance shown above.

ATTENTION

Configure personality header BEFORE installing replacement control into unit

Select the User Interface Appearance which best fits the unit you are servicing.

CONTROL TYPE	USER INTERFACE APPEARANCE	MODEL NUMBER*	USER INTERFACE BOARD JUMPER CONFIGURATION	MACHINE CONTROL JUMPER CONFIGURATION
TOP		ADT521PGJ DDT575 GDT545 GDT550 GDT580 GDT590		NOT PRESENT
FRONT		GDF610 GDF620		NOT PRESENT
TOP		GDT625 GDT635 GDT680		NOT PRESENT
TOP		GDT720		NOT PRESENT
TOP	<p>CYCLES: AutoSense, Heavy, Normal, Light, Rinse</p>	CDT725		NOT PRESENT
TOP	<p>CYCLES: AutoSense, Heavy, Normal, Light, Express, eWash, Rinse</p>	CDT765		

NOTE: Keys/buttons and LEDs will not function until an appropriate personality is selected.

* Derivative or special models may not be included in the model table.

Select jumper configuration based off Identification Sticker in unit or closest User Interface Appearance shown above.

ATTENTION

Configure personality header BEFORE installing replacement control into unit

Select the User Interface Appearance which best fits the unit you are servicing.

CONTROL TYPE	USER INTERFACE APPEARANCE	MODEL NUMBER*	USER INTERFACE BOARD JUMPER CONFIGURATION	MACHINE CONTROL JUMPER CONFIGURATION
TOP	<p>CYCLES: AutoSense, Heavy, Normal, Light, Express, eWash, Rinse</p>	GDT740 PDT750		
TOP	<p>CYCLES: AutoSense, Heavy, Normal, Light, Express, eWash, Rinse</p>	PDT760		
TOP	<p>CYCLES: AutoSense, Heavy, Normal, Light, Rinse</p>	ZDT800		
TOP	<p>CYCLES: AutoSense, Heavy, Normal, Light, Express, eWash, Rinse</p>	ZDT870		

NOTE: Keys/buttons and LEDs will not function until an appropriate personality is selected.

* Derivative or special models may not be included in the model table.

Select jumper configuration based off Identification Sticker in unit or closest User Interface Appearance shown above.