


OVEN CIRCUIT // CIRCUITO DEL HORNO // CIRCUIT DU FOUR

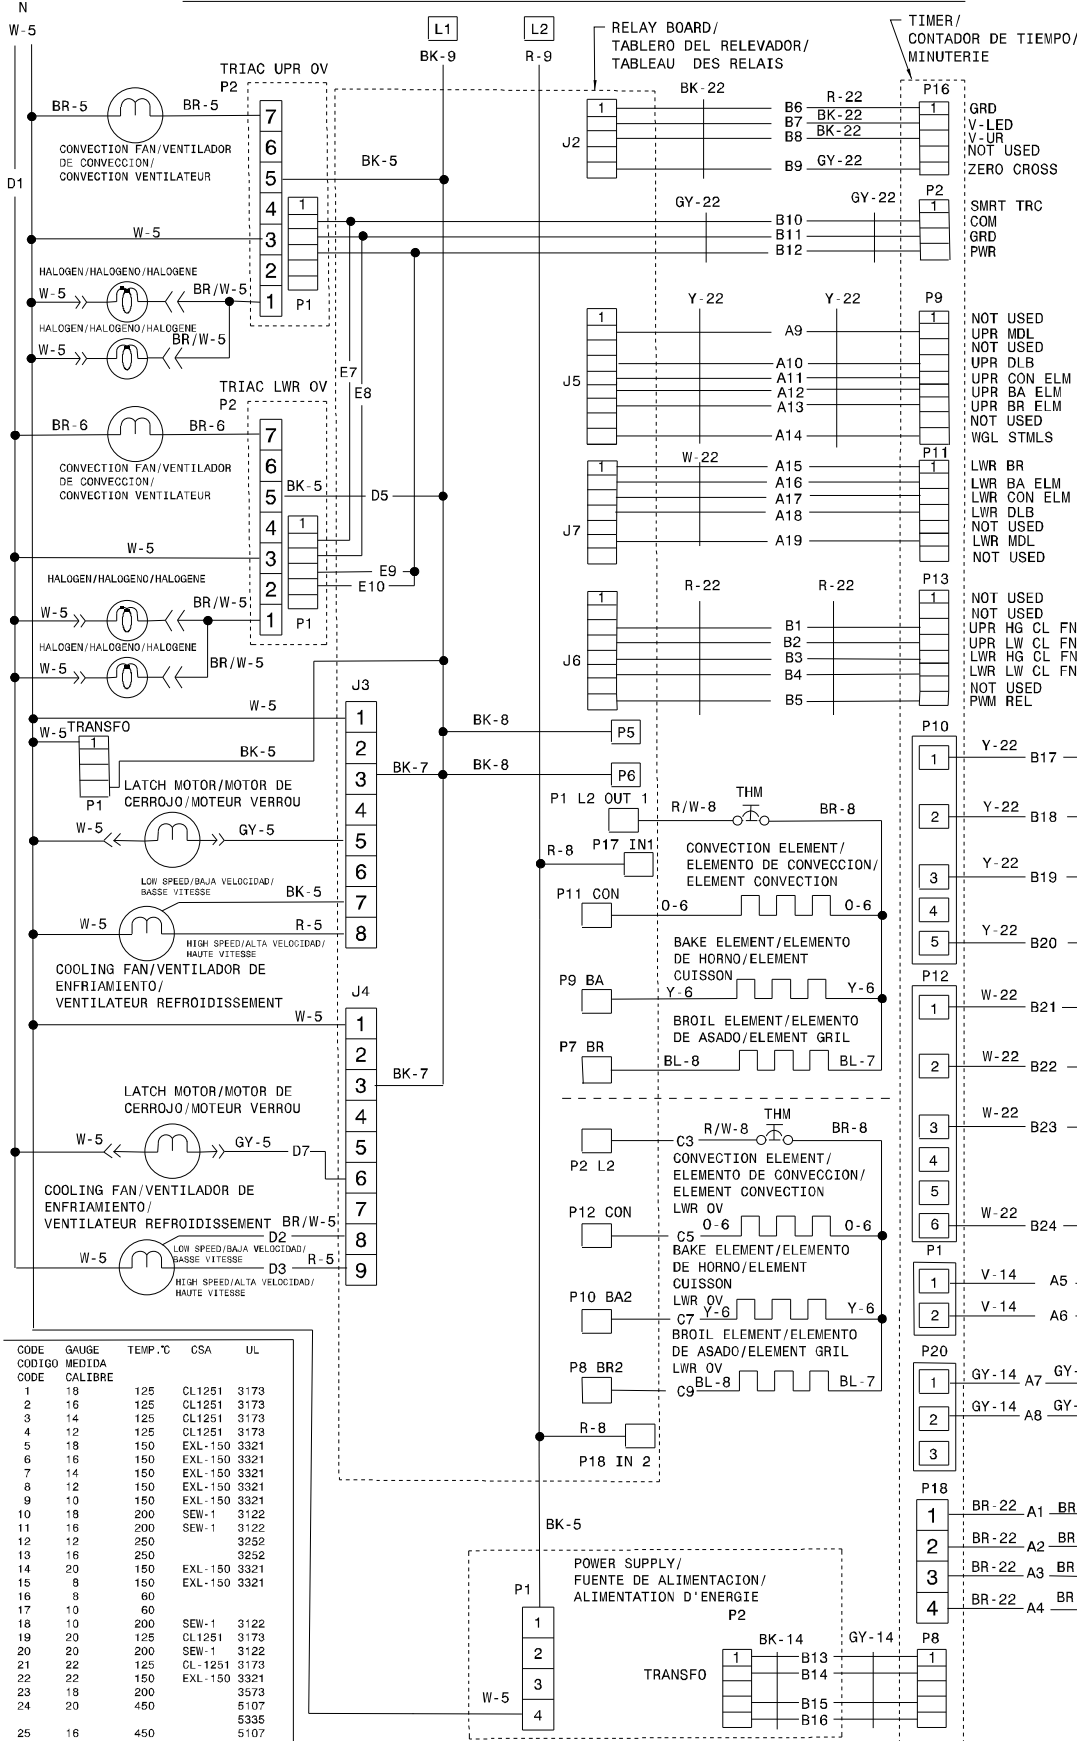

COLOR CODE/CODIGOS DE COLOR/CODE DE COULEUR

GY -	GREY/GRIS/GRIS
G -	GREEN/VERDE/VERT
W -	WHITE/BLANCO/BLANC
R -	RED/ROJO/ROUGE
O -	ORANGE/NARANJA/ORANGE
Y -	YELLOW/AMARILLO/JAUNE
BR -	BROWN/CAFE/BRUN
BL -	BLUE/AZUL/BLEU
BK -	BLACK/NEGRO/NOIR
V -	VIOLET/VIOLETA/VIOLET
T -	TAN/CAFE CLARO/BEIGE

LEGEND/LEYENDA/LEGENDE
 THM - THERMAL CIRCUIT BREAKER/INTERRUPTOR TERMICO/PROTECTEUR THERMIQUE
 UPR OV - UPPER OVEN/HORNO SUPERIOR/FOUR SUPERIEUR
 LWR OV - LOWER OVEN / HORNO INFERIOR / FOUR INFERIEUR


SEE LEGEND/VER LEYENDA/VOIR LEGENDE

CONNECTOR/ CONECTOR/ CONNECTEUR

CAVITY/ CAVIDAD/ CAVITE

CONNECTOR/ CONECTOR/ CONNECTEUR

A										
1	2	3	4	5	6	7	8	9	10	11
12	13	14	15	16	17	18	19	20	21	22
B										
1	2	3	4	5	6	7	8	9	10	11
12	13	14	15	16	17	18	19	20	21	22
C & D										
1	2	3	E							
4	5	6	7	8	9	10	11	12		
7	8	9								

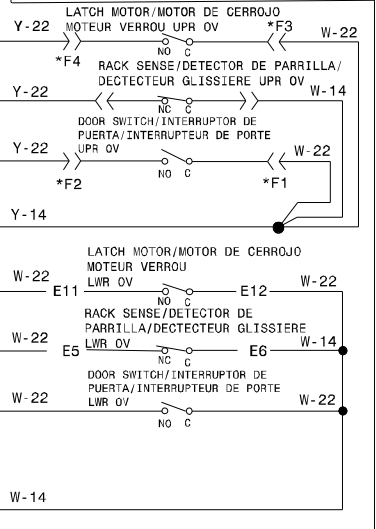

CODE	GAUGE	TEMP. °C	CSA	UL
CODIGO	MEDIDA			
CODE	CALIBRE			
1	18	125	CL1251	3173
2	16	125	CL1251	3173
3	14	125	CL1251	3173
4	12	125	CL1251	3173
5	18	150	EXL-150	3321
6	16	150	EXL-150	3321
7	14	150	EXL-150	3321
8	12	150	EXL-150	3321
9	10	150	EXL-150	3321
10	18	200	SEW-1	3122
11	16	200	SEW-1	3122
12	12	250	3252	
13	16	250	3252	
14	20	150	EXL-150	3321
15	8	150	EXL-150	3321
16	8	60		
17	10	60		
18	10	200	SEW-1	3122
19	20	125	CL1251	3173
20	20	200	SEW-1	3122
21	22	125	CL-1251	3173
22	22	150	EXL-150	3321
23	18	200	3373	
24	20	450	5107	
25	16	450	5335	
			5107	

CAUTION: DISCONNECT POWER BEFORE SERVICING UNIT.
ATENCION: CORTAR LA CORRIENTE ANTES DE REALIZAR EL MANTENIMIENTO DEL ELECTRODOMESTICO.
ATTENTION: COUPEZ L'ALIMENTATION AVANT D'EFFECTUER LA REPARATION.

318046124 REV:J