


OPERATING INSTRUCTIONS

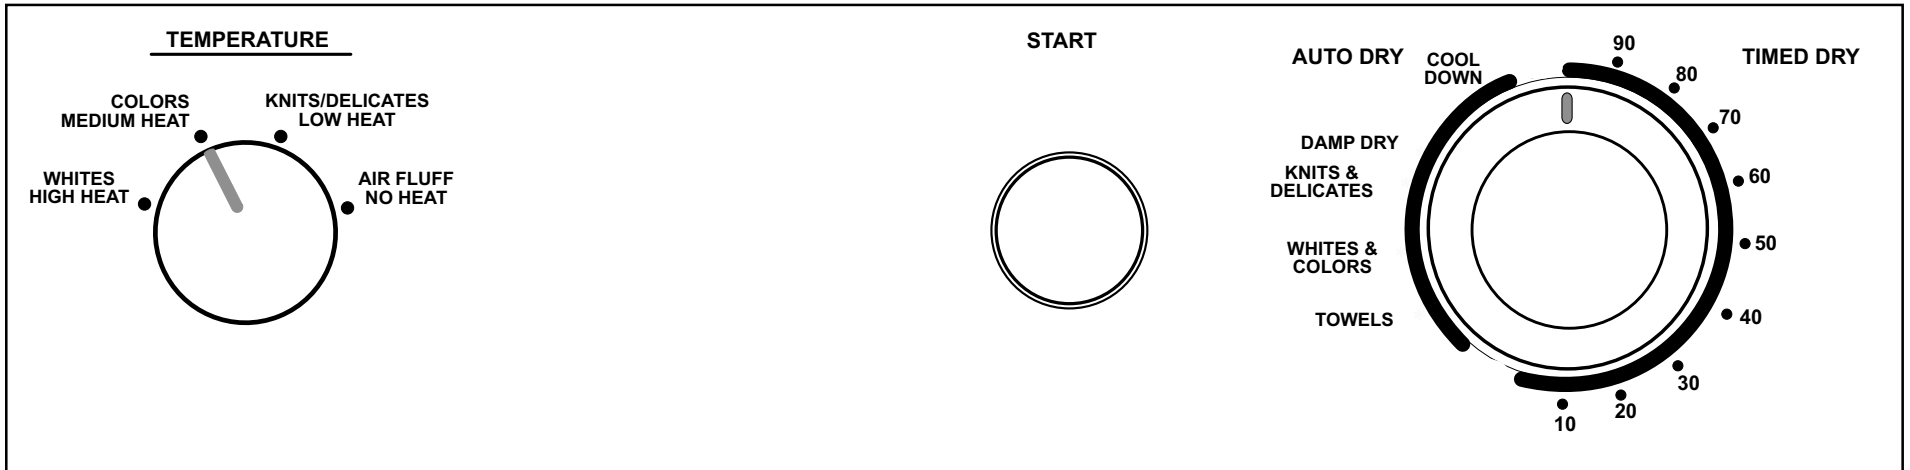

Versión en español

Si desea obtener una copia en español de estas Instrucciones de Funcionamiento, sírvase escribir a la dirección que se incluye a continuación.

Solicite la P/N 131942700.

Spanish Owner's Guides
Frigidaire Home Products
P. O. Box 212378
Augusta, GA 30917

Before Operating Your Dryer

Read your dryer Use and Care Guide. It has important safety and warranty information. It also has many suggestions for best drying results.

⚠ WARNING To reduce the risk of fire, electric shock, or injury to persons, read the IMPORTANT SAFETY INSTRUCTIONS in your dryer Use and Care Guide before operating this appliance.

Operating Steps

Read **Drying Procedures** in your Use and Care Guide. It explains these operating steps in detail.

1. Prepare items for drying.
2. Check that lint screen is clean and in place.
3. Load the dryer. If desired, add a dryer fabric softener sheet.
4. Close the dryer door.
5. Set Temperature and Cycle Signal controls.
6. Turn cycle selector clockwise to desired setting.
7. Start dryer. Push the START button for 2 seconds, or turn the Turn to Start control clockwise to ON. Hold for 1-2 seconds and release.
8. A signal will sound at the end of the cycle.

9. Remove items immediately and hang or fold.

10. Clean lint screen after every load.


Temperature Selection

Always follow directions on fabric care labels.

⚠ WARNING To avoid fire hazard, do not use heat to dry items containing feathers or down, foam rubber, plastics, or similarly textured, rubber-like materials. Use the Air Fluff-No Heat cycle only.

The **WHITES-HIGH HEAT**, **COLORS-MEDIUM HEAT**, and **KNITS/DELICATES-LOW HEAT** temperature settings may be used with any cycle setting. The **AIR FLUFF-NO HEAT** setting can be used only in the Timed Dry cycle.

AIR FLUFF-NO HEAT setting tumbles the load without heat. Use Air Fluff to freshen clothing, pillows or blankets, or to dust draperies.

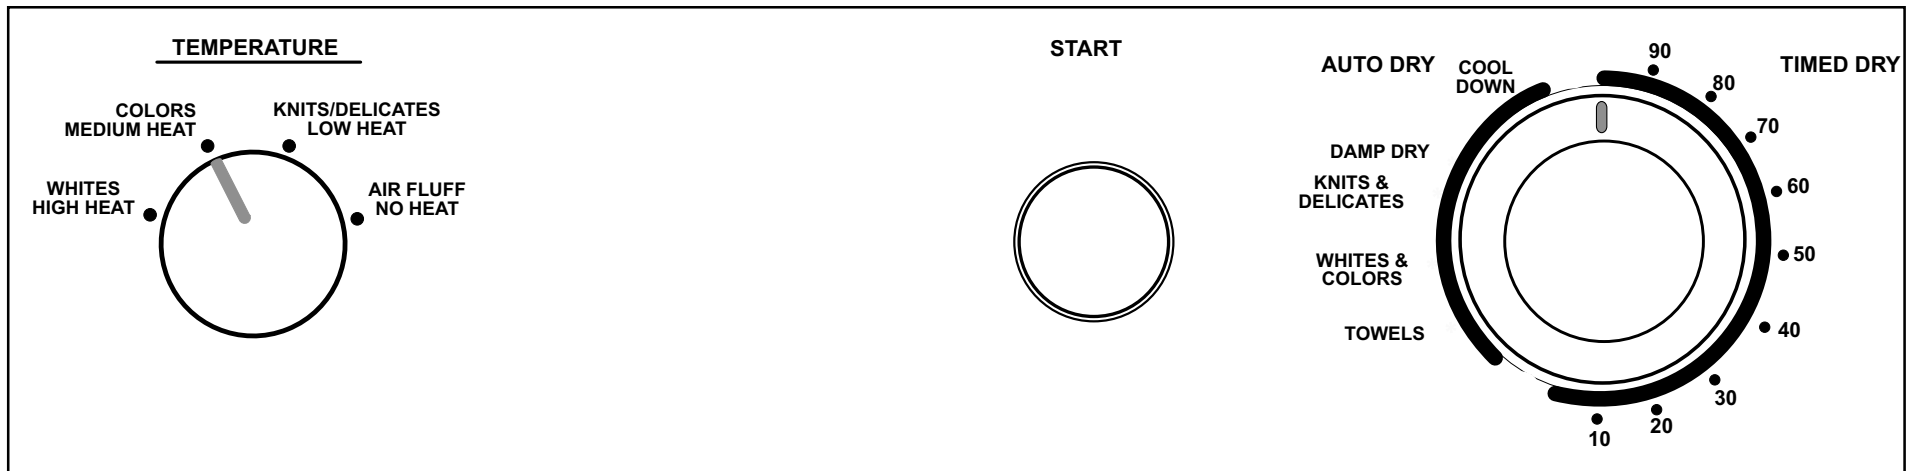

Cycle Selection

Turn cycle selector clockwise to desired cycle and setting.

The Auto Dry and Timed Dry cycles end with a cool down period. The heat automatically turns off and the load continues to tumble during the cool down period. This reduces wrinkling and makes items easier to handle during unloading.

Drying time varies depending on size and dampness of load, weight and fabric type. Room temperature and humidity, type of installation and electrical voltage or gas pressure can also affect drying time.

Timed Dry Cycle

This cycle provides up to 90 minutes of drying time at the temperature selection of your choice.

Auto Dry Cycle

- **TOWELS** - This setting is best for towel loads. Select the WHITES--HIGH HEAT temperature setting.
- **WHITES & COLORS** - This setting is best for cotton or permanent press items. Select the WHITES--HIGH HEAT temperature setting for cotton loads, or COLORS--MEDIUM HEAT for perm press loads.
- **KNITS & DELICATES** - This setting is best for delicate and knit items. Select the KNITS/DELICATES-- LOW HEAT temperature setting for most knit or delicate loads.
- **DAMP DRY** - This setting is best for items you wish to partially dry before hanging or ironing. Select the temperature setting most suitable for the load.

Energy Saving Tips

- Keep the lint screen clean and exhaust the dryer correctly.
- Sort laundry properly and select proper temperature and cycle settings. Choose the Automatic cycle whenever possible for accurate drying time.
- Dry only full loads. Single items and small loads usually take longer to dry.
- Avoid overloading, adding wet items to a partially dry load, and overdrying.
- Dry one load after another to take advantage of a warm dryer.
- Opening the door needlessly causes warm air to escape, which prolongs drying time.
- If possible, use the dryer on low humidity days.
- Install the dryer in an area where the room temperature is at least 45°F (7°C).