

# DRYER CYCLE DESCRIPTIONS

This information covers several different models. Your dryer may vary from the model shown and may not have all the cycles and features described.

## Cycle Selector (Timer) Control

### AUTOMATIC CYCLES

Automatic Cycles may be used for most loads. These cycles give the best drying in the shortest time. Drying time varies according to the type of fabric, size of the load, and dryness setting.

#### Normal/Lavar y usar (Normal/Permanent Press), or Tejido de punto/Delicado (Knit/Delicate)

Dryness is determined by the exhaust temperature of the dryer. When the dryness selected is reached, the dryer goes into a cool down period of up to 10 minutes.

#### Sensor automático de humedad (Auto Moisture Sensing)

Dryness is determined by an electronic sensor which "feels" the amount of moisture in clothes as they pass over it. When the dryness selected is reached, the dryer goes into a cool down period of up to 10 minutes.

#### Automatic Drying Cycles

The Cycle Selector (Timer) Control may be set to NORMAL (\*), which is good for most fabrics. At the end of the cycle, you may check the dryness of the load.

- If the load is drier than you like, you may select a setting closer to Menos Seco (Less Dry) the next time you dry a similar load.
- If a load is not as dry as you like, you may complete drying using a Timed cycle. You may select a setting closer to Más Seco (More Dry) the next time you dry a similar load.

### SECADO CRONOMETRADO (Timed Dry)

This cycle may be used to get up to 70 or 80 minutes (depending on the model) of heated drying time. The heating cycle is followed by a cool down period of up to 10 minutes.

### SECADO AL AIRE (Air Dry)

The Secado al aire (Air Dry) cycle may be used to get up to 20 to 30 minutes (depending on the model) of drying time in room temperature air. This setting may be used for items such as plastics, rubber and heat-sensitive fabrics.

### ANTI-ARRUGAS (WRINKLE GUARD® I)

WRINKLE GUARD® I helps prevent wrinkles that form when clothes are not removed promptly at the end of a cycle. WRINKLE GUARD® I tumbles the load continuously for up to 30 minutes or until dryer door is opened.

During WRINKLE GUARD® I, the End of Cycle Signal will sound every 5 minutes unless the signal is turned off.

## Temperatura de Secado (Fabric/Temperature Control)

For models with a Fabric/Temperature Control knob, you may use this control to select the drying temperature that matches the fabrics in your load. The following table lists suggested auto moisture or timed dry settings for various loads. This is only a guide.

FABRIC/ TEMPERATURE	LOAD TYPE	AUTO MOISTURE SETTING	TIMED DRY SETTING*
<b>ALGODÓN (Cotton) Alto (High)</b>	Heavyweight items - quilts, towels, jeans, cottons, bedspreads	Más seco (More Dry)	50 - 70 minutes
<b>NORMAL/ LAVAR y USAR (Normal/ Perm Press) Mediano Alto (Medium High)</b>	Medium weight items - shirts, sheets, slacks, play clothes, diapers	Normal	30 - 50 minutes
<b>TEJIDO DE PUNTO/ CASUAL (Knit/casual) Mediano (Medium)</b>	Medium weight items - synthetics (polyester, acrylic), skirts, sweaters, slacks	Normal	30 - 50 minutes
<b>DELICADO (Delicate) Bajo (Low)</b>	Lightweight items - lingerie, blouses, dresses synthetics and blends	Menos seco (Less Dry)	20 - 40 minutes

\*Reset time as needed to allow items to dry completely.

---

## Señal de Fin de Ciclo (End of Cycle Signal Control)

The End of Cycle Signal sounds when a cycle is complete. This signal is helpful when you are drying permanent press, synthetics and other items that should be removed from the dryer promptly at the end of a cycle.

Depending on your model, the End of Cycle Signal may be automatic or selectable. Some models have a volume control.

If your model has a selectable End of Cycle Signal, and the signal is turned off, you will not hear WRINKLE GUARD® I sound every 5 minutes.

---

## Dryer Rack (Optional on some models)

A dryer rack may be used to machine dry items you would not necessarily want to tumble dry or that you would normally line dry (for example, sweaters).

For ordering information, please refer to the service numbers located on the back page of the dryer user instructions or contact your Sears store or Sears Service Center.