



**LEGEND/LEYENDA/LEGENDE**

- SW. - SWITCH/INTERRUPTOR/INTERRUPTEUR
- P.L. - PILOT LIGHT/LAMPARA PILOTO//LAMPE TEMOIN
- R.F. - RIGHT FRONT/FRENTE DERECHO/AVANT DROIT
- R.R. - RIGHT REAR/TRASERO DERECHO/ARRIERE DROIT
- L.F. - LEFT FRONT/FRENTE IZQUIERDO/AVANT GAUCHE
- L.R. - LEFT REAR/TRASERO IZQUIERDO/ARRIERE GAUCHE
- LIM. - LIMITOR/LIMITADOR/LIMITEUR
- ELM. - ELEMENT/ELEMENTO/ELEMENT
- H.S. - HOT SURFACE/SUPERFICIE CALIENTE/SURFACE CHAUDE
- T.B. - TERMINAL BLOCK/BLOQUE DE TERMINALS/BLOC DE CONNECTION
- CON. BD - CONTROL BOARD/TABLERO DE CONTROL/TABLEAU CONTROLE
- C.T. - COOK TOP/PLANCHA DE COCINAR/TABLE DE CUISSON
- t\* - TEMPERATURE PROBE/SONDA DE TEMPERATURA/SONDE THERMIQUE
- .L - BOBINE/BOBINE/BOBINE

**COLOR CODE/CODIGOS/COLEUR**

- G. - GREEN/VERDE/VERT
- W. - WHITE/BLANCO/BLANC
- R. - RED/ROJO/ROUGE
- O. - ORANGE/NARANJA/ORANGE
- Y. - YELLOW/AMARILLO/JAUNE
- BR. - BROWN/MORENO/BRUN
- BL. - BLUE/AZUL/BLEU
- BK. - BLACK/NEGRO/NOIR
- PK. - PINK/ROSA/ROSE

WIRE ALAMBRE FIL	GAUGE MEDIDA CALIBRE	TEMP.°C	CSA	UL
1	18	125	CL1251	3173
2	16	125	CL1251	3173
3	14	125	CL1251	3173
4	12	125	CL1251	3173
5	18	150	EXL-150	3321
6	16	150	EXL-150	3321
7	14	150	EXL-150	3321
8	12	150	EXL-150	3321
9	10	150	EXL-150	3321
10	18	200	SEW-1	3122
11	16	200	SEW-1	3122
12	12	250		3252
13	16	250		3252
14	20	150	EXL-150	3321
15	8	150	EXL-150	3321
16	8	60		
17	10	60		
18	10	200	SEW-1	3122
19	20	125	SEW-1	3173
20	20	200	SEW-1	3122
21	22	125	CL-1252	3266
22	22	150		10109
23	18	200		3573
24	20	105		1015
25	18	105		1015
26	16	105		1015
27	14	105		1015
28	12	105		1015
29	10	105		1015
30	22	105		1569
31	16	200		3135

**CAUTION: DISCONNECT POWER BEFORE SERVICING UNIT.**  
**ATENCION: CORTAR EL CORRIENTE ANTES DE REALIZAR EL MANTENIMIENTO DEL ELECTRODOMESTICO.**  
**ATTENTION: COUPEZ L'ALIMENTATION AVANT D'EFFECTUER LA REPARATION.**

**318046815 REV:C**