


COOKTOP CIRCUIT

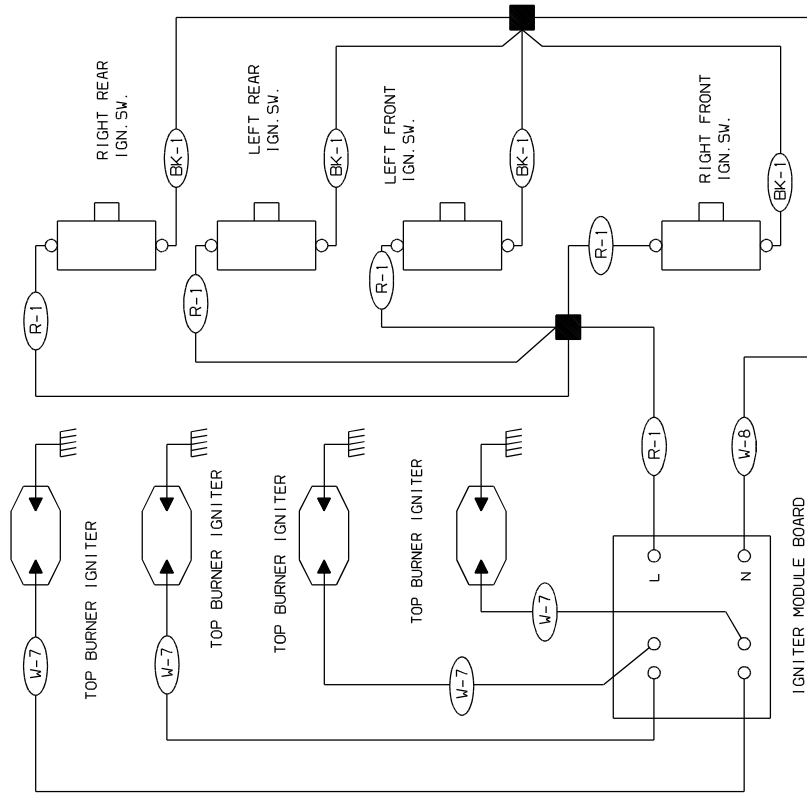


WARNING
DISCONNECT POWER BEFORE
SERVICING UNIT.

WIRE	GAGE	TEMP °C	UL STYLE
8	18	200	3122
7	18	200	3304
6	12	150	3321
5	16	200	3122
4	10	150	3321
3	14	150	3321
2	16	150	3321
1	18	150	3321

COLOR CODE	WIRE
P PINK	
PR PURPLE	
R RED	
T TAN	
V VIOLET	
W WHITE	
O ORANGE	
Y YELLOW	
BL/W BLUE/WHITE STRIPE	

WARMER DRAWER


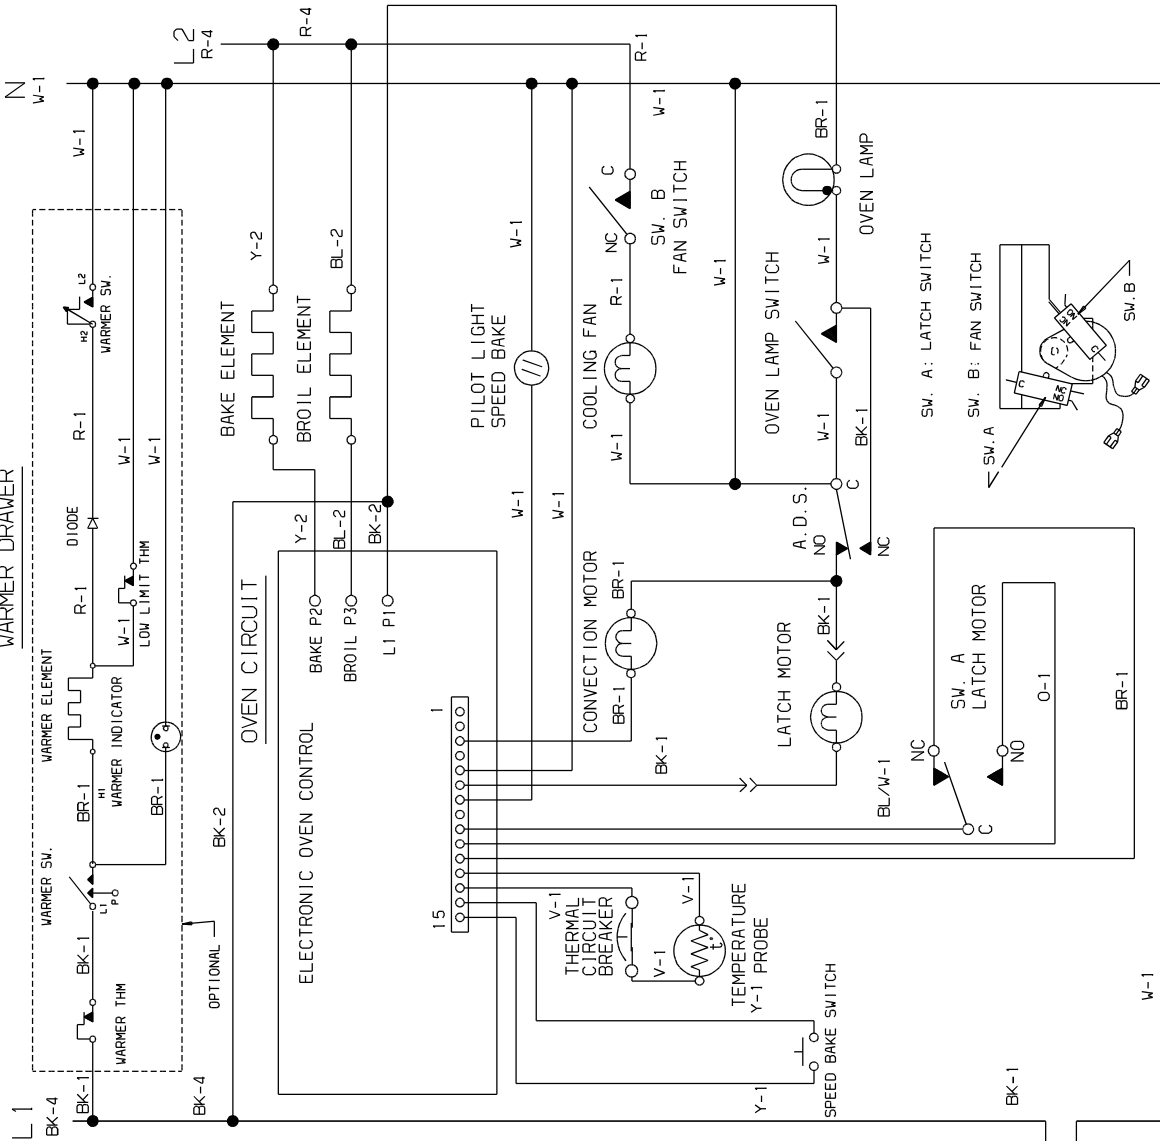


NOTE:
CIRCUIT SHOWN WITH ALL CONTROLS SET TO "OFF".
OVEN DOOR CLOSED AND UNLOCKED.

L 1
BK-4

COOKTOP CIRCUIT / PLANCHA DE COCINAR

L 2
R-4
N
W-1

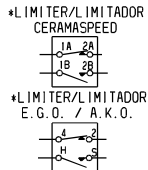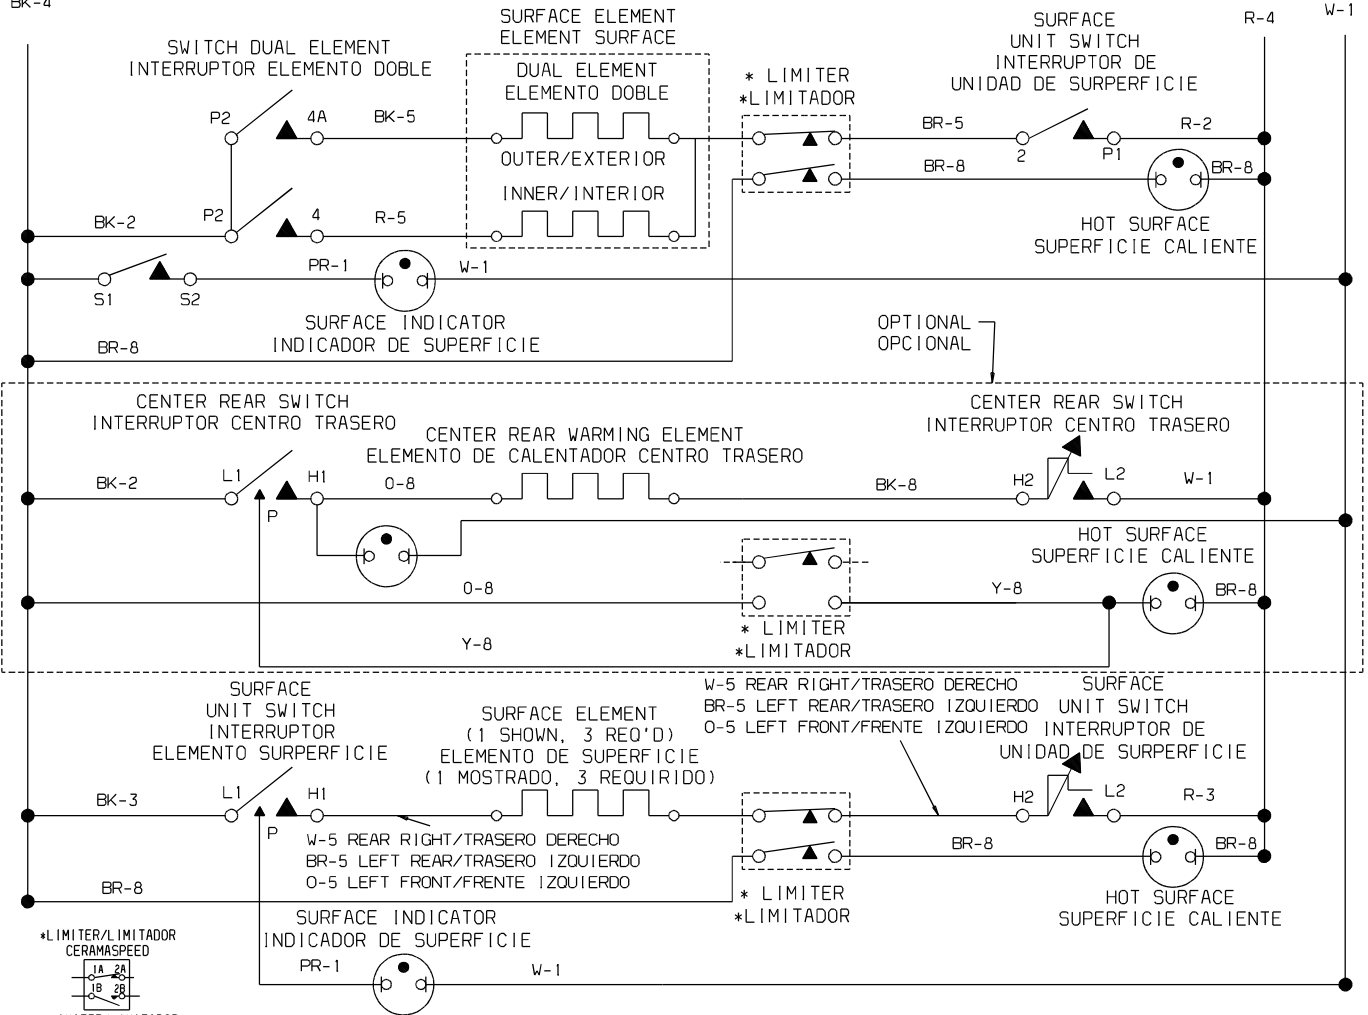

COOKTOP CIRCUIT / PLANCHA DE COCINAR

