




Washer Operating Instructions

Laundry Center Models 94812 / 94814 / 94872

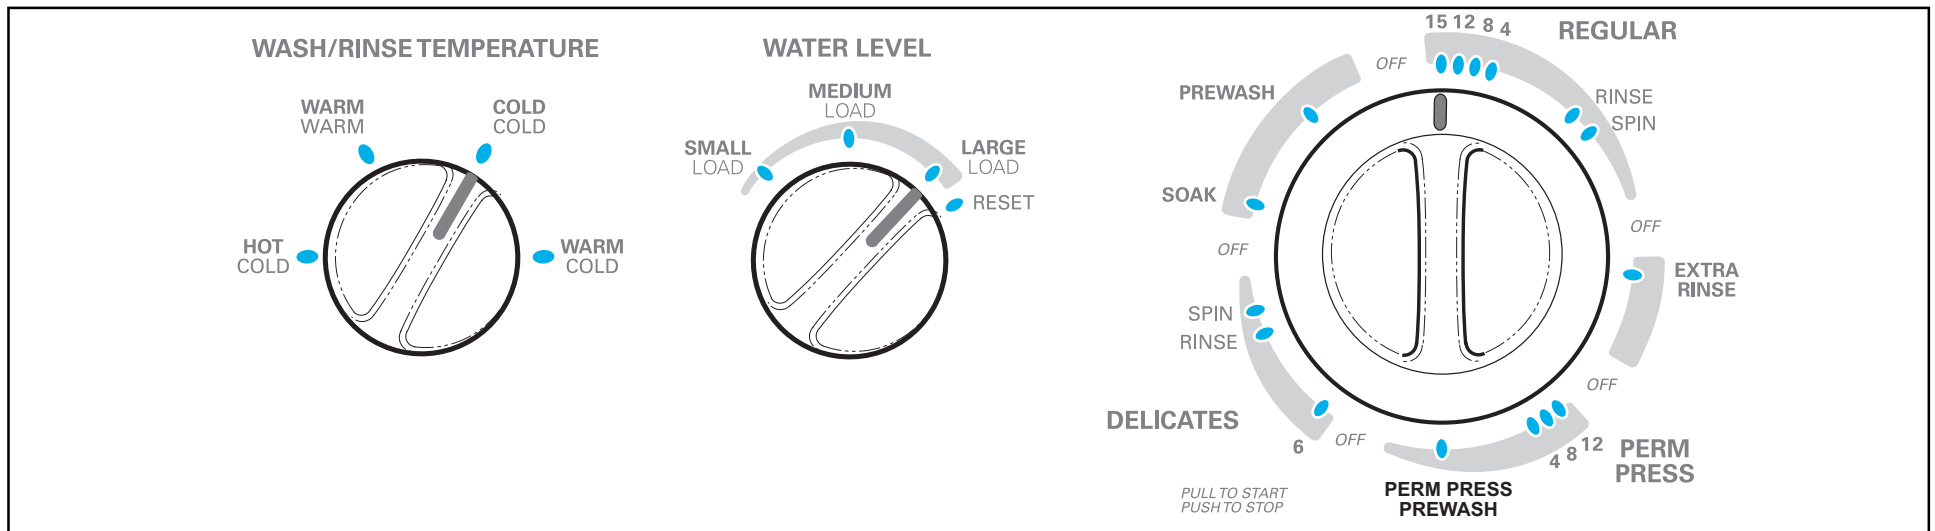

Before Operating Your Washer

Read your Owner's Guide. It has important safety and warranty information. It also has many suggestions for best washing results.

⚠ WARNING To reduce the risk of fire, electric shock, or injury to persons, read the IMPORTANT SAFETY INSTRUCTIONS in your Owner's Guide before operating this appliance.

Operating Steps

Read Washing Procedures in your Owner's Guide. It explains these operating steps in detail.

1. Sort laundry into loads that can be washed together.
2. Prepare items for washing.
3. Pretreat stains and heavy soil.
4. Add the measured amount of detergent to wash tub.

5. If desired, add liquid bleach to Bleach Dispenser.
6. Add laundry load to wash tub.
7. If desired, add liquid fabric softener to Fabric Softener Dispenser.
8. Set cycle selector and washer controls according to type, size, and soil level of each load.
9. Close lid and pull cycle selector knob to start washer. The lid must be closed to agitate or spin. The washer will automatically turn off if the lid is lifted during agitation. For your safety, the lid locks when the tub is spinning.
10. Remove items at end of cycle. Wait about 2 minutes for safety lid lock to release.

Cycle Selection

Always follow instructions on fabric care labels. The Regular, Perm Press and Delicates cycles provide a first spin, followed by a deep rinse and a spray rinse during final spin.

Regular Cycle

This cycle provides up to 15 minutes of normal wash agitation followed by a fast spin for most fabrics.

Extra Rinse Cycle

Use the Extra Rinse cycle after a complete wash cycle when an additional rinse is desired. It provides 3 minutes of rinse agitation, followed by a spray rinse during spin at the selected rinse water temperature.

Perm Press Cycle

This cycle provides up to 12 minutes of normal wash agitation followed by a fast spin for cottons and blends with a no-iron finish.

Select the **Perm Press Prewash** setting to help loosen soil and remove stains before washing. Add recommended amount of detergent and other laundry products desired to tub. Add load. Select a cold water rinse, appropriate load size and fast agitation speed. Load will agitate 4 minutes, drain and spin. Follow Perm Press Prewash with a complete Perm Press cycle.

Cycle Selection (continued)

Delicates Cycle

This cycle provides 6 minutes of gentle wash agitation followed by a slow spin for knit and delicate items.

Soak Cycle

- Use Soak to treat heavily soiled or stained items. Soak provides 3 minutes of agitation and 12 minutes of soaking time. The load then advances into the Prewash portion of the cycle.
- Use the amount of detergent recommended for a normal wash cycle. If desired, use bleach or a soaking agent for colorfast items.
- The Soak water temperature is the same as the rinse water temperature selected.
- Follow Soak with a complete wash cycle using the normal amount of detergent.

Prewash Cycle

- Use Prewash when soaking is not necessary. Prewash helps remove protein-based stains such as milk, grass and blood. It also helps loosen soils before washing. During Prewash, the washer will agitate the load for 3 minutes, then drain, spin and shut off.
- Use the amount of detergent recommended for a normal wash cycle.
- The Prewash water temperature is the same as the wash water temperature selected. To avoid setting protein stains, select cold water.
- Follow Prewash with a complete wash cycle using the normal amount of detergent.

Controls

Always follow instructions on fabric care labels.

WATER TEMPERATURE sets water temperatures for washing and rinsing. Select wash water temperature according to fiber content and soil level of the load, and type of detergent used. A cold water rinse saves energy and reduces wrinkling.

If a cold rinse is selected, the washer will fill with cold water during rinse, followed by a cold spray rinse during final spin. If a warm rinse is selected, the washer will fill with cold water during rinse, followed by a warm spray rinse during final spin.

The following chart suggests wash/rinse temperatures for basic fabric types.

Fabric Type	Wash/Rinse Temperature
Heavily soiled white/colorfast cotton, perm press	Hot/Cold
Lightly soiled white/colorfast cotton, perm press	Warm/Cold
Noncolorfast fabrics, knits, delicates	Cold/Cold
Washable woolens	Warm/Cold

WATER LEVEL sets the amount of wash and rinse water for the wash load. Select a water level appropriate for the load size. There should be enough water for items to move freely.


- To increase water level after the wash cycle begins, turn the Water Level control to Reset and hold. When water begins to enter the tub, turn the control to the desired setting.

Energy Saving Tips

- Wash full loads. Oversize loads use extra energy. Undersize loads waste energy.
- When small wash loads cannot be avoided, use lower water levels.
- Select the appropriate cycle and time for each load. Shorten wash times for lightly soiled loads.
- To reduce drying time, select a wash cycle with a fast spin speed to remove more water from heavy items such as towels and jeans.
- Use warm water to wash most loads. Limit hot water washes to heavily soiled and white loads. Use cold water for lightly soiled items and rinsing.
- Operate the washer in early morning and late evening when utility demands are low.
- Follow proper laundry procedures to avoid rewashing.



Laundry Center Dryer Operating Instructions Models 94802 / 94812 / 94814 / 94862 / 94872

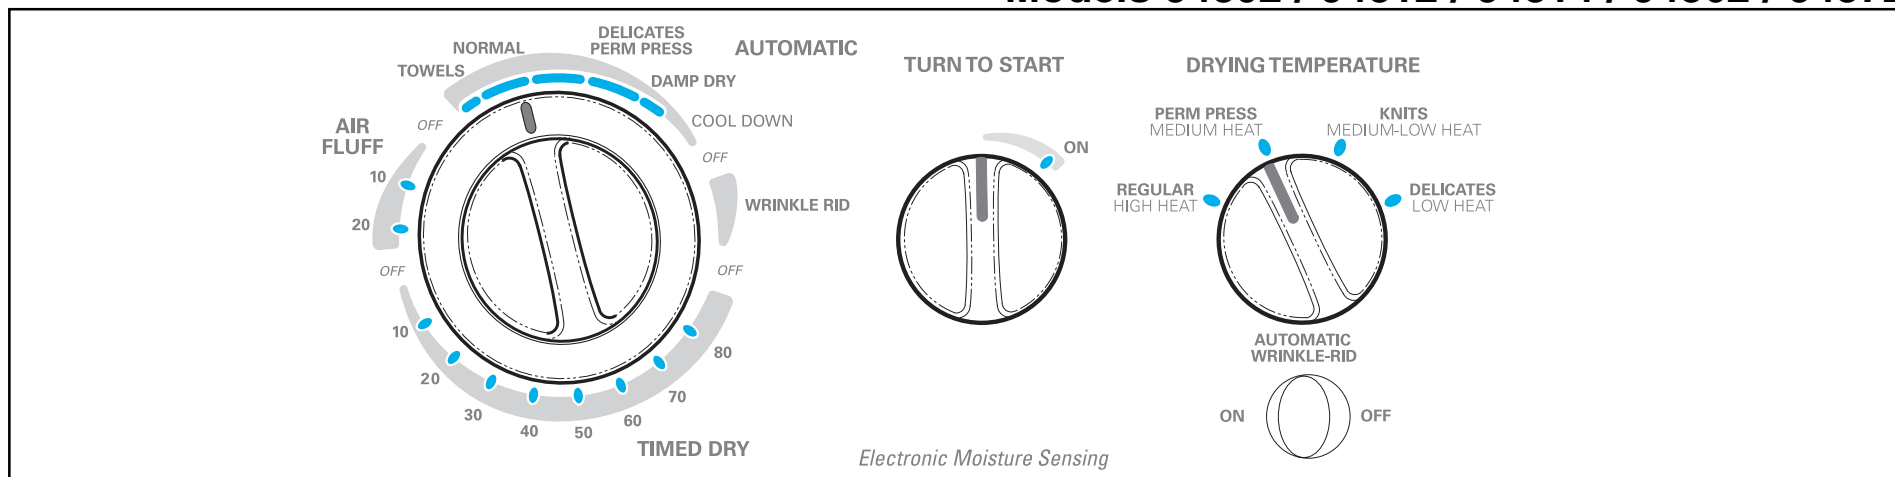

Before Operating Your Dryer

Read your Owner's Guide. It has important safety and warranty information. It also has many suggestions for best drying results.

⚠ WARNING To reduce the risk of fire, electric shock, or injury to persons, read the IMPORTANT SAFETY INSTRUCTIONS in your owner's guide before operating this appliance.

Operating Steps

Read Drying Procedures in your Owner's Guide. It explains these operating steps in detail.

1. Prepare items for drying.
2. Check that lint screen is clean and in place.
3. Load the dryer. If desired, add a dryer fabric softener sheet.
4. Close the dryer door.

5. Set Drying Temperature control.
6. Turn cycle selector clockwise to desired setting.
7. Start dryer. Turn the Turn to Start control clockwise to ON. Hold for 1-2 seconds and release.
8. A signal will sound when the cycle ends.
9. Remove items immediately and hang or fold.
10. Clean lint screen after every load.

Temperature Selection

Always follow directions on fabric care labels.

⚠ WARNING To avoid fire hazard, do not use heat to dry items containing feathers or down, foam rubber, plastics, or similarly textured, rubber-like materials. Use Air Fluff-No Heat cycle only.

Select the temperature setting most suitable for each load. The REGULAR--HIGH HEAT, PERM PRESS--MEDIUM HEAT, KNITS--MEDIUM-LOW HEAT and DELICATES--LOW HEAT temperature settings may be used with any cycle setting.

Cycle Selection

Turn cycle selector clockwise to desired cycle and setting.

The Automatic and Timed Dry cycles end with a cool down period. The heat automatically turns off and the load continues to tumble during the cool down period. This reduces wrinkling and makes items easier to handle during unloading.

Drying time varies depending on size and dampness of load, weight and fabric type. Room temperature and humidity, type of installation and electrical voltage or gas pressure can also affect drying time.

Cycle Selection (continued)

Automatic Cycle

- **TOWELS** - This setting is best for towel loads. Select the REGULAR--HIGH HEAT temperature setting.
- **REGULAR** - This setting is best for cotton items. Select the REGULAR--HIGH HEAT temperature setting.
- **DELICATES/PERM PRESS** - This setting is best for delicate, knit, or perm press items. Select the PERM PRESS--MEDIUM HEAT temperature setting for permanent press items, the KNITS---MEDIUM-LOW temperature setting for most knit items, or the DELICATES--LOW HEAT temperature setting for delicate items.
- Occasionally a load may seem too damp or overdried at the end of the cycle. To increase drying time for similar loads in the future, set the cycle selector to the left of the TOWELS, REGULAR, or DELICATES/PERM PRESS setting. For loads requiring less drying time, set the cycle selector to the right.
- **DAMP DRY** - This setting is best for items you wish to partially dry before hanging or ironing. Select the temperature setting most suitable for the load.

Wrinkle Rid Cycle

If the dried load cannot be removed promptly at the end of the cycle, the cycle selector will automatically advance to the WRINKLE RID setting when the Automatic Wrinkle-Rid option is set to **ON**. Unheated tumbling continues for about 20 minutes to help reduce wrinkling. If you do not wish to advance into the Wrinkle Rid cycle from Automatic cycle, set the Automatic Wrinkle-Rid option to **OFF**. The Wrinkle Rid cycle can also be selected as a separate cycle.

Air Fluff Cycle

This cycle provides approximately 20 minutes of tumbling without heat. Use Air Fluff to dry items containing feathers or down, foam rubber, plastics, or similarly textured, rubber-like materials, to freshen clothing, pillows or blankets, or to dust draperies.

Timed Dry Cycle

This cycle provides up to 90 minutes of drying time at the temperature selection of your choice.

Energy Saving Tips

- Keep the lint screen clean and exhaust the dryer correctly.
- Sort laundry properly and select proper temperature and cycle settings. Choose the Automatic Dry cycle whenever possible for accurate drying time.
- Dry only full loads. Single items and small loads usually take longer to dry.
- Avoid overloading, adding wet items to a partially dry load, and overdrying.
- Dry one load after another to take advantage of a warm dryer.
- Opening the door needlessly causes warm air to escape, which prolongs drying time.
- If possible, use the dryer on low humidity days.
- Install the dryer in an area where the room temperature is at least 45°F (7°C).

Laundry Center Features

