 


# DRYER OPERATING INSTRUCTIONS

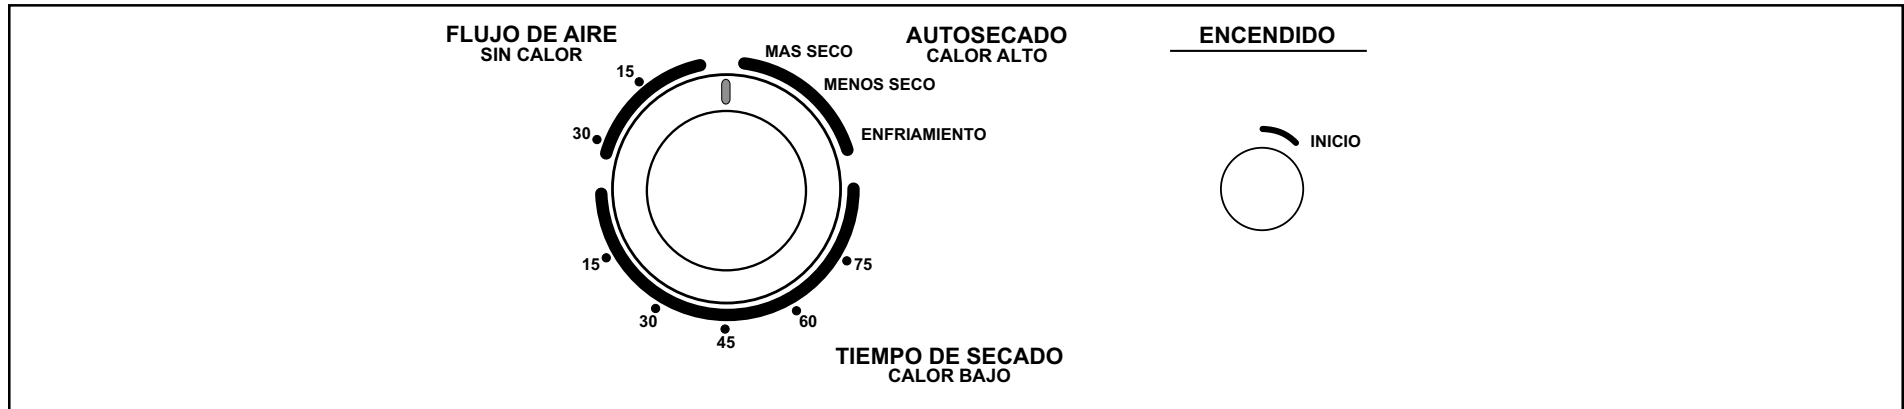

## Before Operating Your Laundry Center

Read your laundry center Owner's Guide. It has important safety and warranty information. It also has many suggestions for obtaining the best drying results.

**⚠ WARNING** To reduce the risk of fire, electric shock, or injury to persons, read the IMPORTANT SAFETY INSTRUCTIONS in your laundry center Owner's Guide before operating this appliance.

## Operating Steps

1. **Prepare items for drying.**
2. **Check that lint screen is clean and properly in place.**
3. **Load the dryer.** If desired, add a dryer fabric softener sheet.
4. **Close the dryer door.**
5. **Turn cycle selector clockwise to desired setting.**
6. **Start dryer.** Turn the Encendido knob to Inicio, hold for 2 seconds, and release.

7. **At end of cycle, remove items immediately and hang or fold.**
8. **Clean lint screen after every load.**

## Cycle Settings

Turn the cycle selector clockwise to the desired cycle and setting.

Each cycle ends with a cool down period. The heat automatically turns off and the load continues to tumble for 5-10 minutes. This reduces wrinkling and makes items easier to handle during unloading.

Drying time varies depending on size and dampness of load, weight and fabric type. Room temperature and humidity, type of installation and electrical voltage or gas pressure can also affect drying time.

**AUTOSECADO-CALOR ALTO (AUTO DRY-HIGH HEAT)** is recommended for regular and permanent press items that can be tumble dried at high heat. The Auto Dry-High Heat cycle determines drying time automatically.

For items requiring more drying time, set the cycle selector on MAS SECO (More Dry). For items requiring less drying time, set the cycle selector on MENOS SECO (Less Dry).

This cycle works best with items of similar fabric, weight and construction.

**TIEMPO DE SECADO-CALOR BAJO (TIME DRY-LOW HEAT)** provides up to 90 minutes of drying time at low heat for permanent press, knit and delicate items.

**FLUJO DE AIRE-SIN CALOR (AIR FLUFF-NO HEAT)** provides up to 30 minutes of tumbling without heat. Use Flujo de Aire-Sin Calor (Air Fluff-No Heat) to freshen clothing, pillows or blankets or to dust draperies. Heat-sensitive items such as plastics, foam rubber or similarly textured rubber-like materials or items containing feathers or down should be dried **only** with the Flujo De Aire-Sin Calor (Air Fluff-No Heat) cycle.

**⚠ WARNING** To avoid fire hazard, do not use heat to dry items containing feathers or down, foam rubber, plastics, or similarly textured, rubber-like materials. Use Flujo De Aire-Sin Calor (Air Fluff-No Heat) cycle only.