


**COLORS / COLOR / COULEURS**


- BK- BLACK/NEGRO/NOIR
- W- WHITE/BLANCO/BLANC
- O- ORANGE/NARANJA/ORANGE
- BR-BROWN/MORENO/BRUN
- PK-PINK/ROSA/ROSE
- V- VIOLET/VIOLETA/VIOLET
- G- GREEN/VERDE/VERT
- R- RED/ROJO/ROUGE
- Y- YELLOW/AMARILLO/JAUNE
- BL- BLUE/AZUL/BLEU
- BR/W-BROWN/WHITE // MORENO/BLANCO // BRUN/BLANC
- BL/W-BLUE/WHITE // AZUL/BLANCO // BLEU/BLANC

CODE	GAUGE/MED. CALIBRE	TEMP. °C	C5A	STYLE	UL
1	18	125	CL1251	3173	
2	16	125	CL1251	3173	
3	14	125	CL1251	3173	
4	12	125	CL1251	3173	
5	18	150	EXL-150	3321	
6	16	150	EXL-150	3321	
7	14	150	EXL-150	3321	
8	12	150	EXL-150	3321	
9	10	150	EXL-150	3321	
10	18	200	SEW-1	3122	
11	16	200	SEW-1	3122	
12	12	250		3252	
13	16	250		3252	
14	20	150	EXL-150	3321	
15	8	150	EXL-150	3321	
16	8	60			
17	10	60			
20	20	200			3122
25	16	450			5107

EXAMPLE/EJEMPLO/EXEMPLE: (R-8)\*  
 \* WHEN USING 4000 W. BROIL ELEMENT  
 \* CUANDO SE USA 4000 W. ELEMENTO DE ASADO  
 \* QUAND UTILISE AVEC 4000 W. ELEMENT GRILLAGE

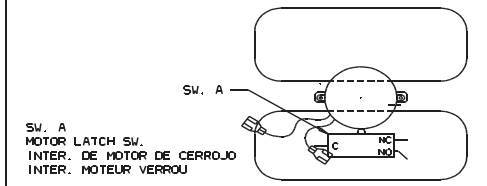

OPTIONAL: \* :TRUE HIDDEN BAKE ONLY  
 OPCIONAL: \* :ELEMENTO OCULTO DE HORNO SOLAMENTE  
 FACULTATIF: \* :ELEMENT CACHE SEULEMENT

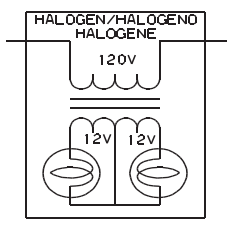

**CAUTION:** DISCONNECT POWER BEFORE SERVICING UNIT.  
**ATENCIÓN:** CORTAR EL CORRIENTE ANTES DE REALIZAR EL MANTENIMIENTO DEL ELECTRODOMESTICO.  
**ATTENTION:** COUPEZ L'ALIMENTATION AVANT D'EFFECTUER LA REPARATION.