

CAUTION: DISCONNECT ELECTRIC CURRENT BEFORE SERVICING

TERM.	CIRCUIT	WASH (15 MIN)	PUMP (8 MIN)	RINSE (15 MIN)	OFF	EX. RINSE PUMP (9 MIN)	OFF	WASH (12 MIN)	PUMP (6 MIN)	RINSE (6 MIN)	OFF	WASH (6 MIN)	PUMP (6 MIN)	RINSE (6 MIN)	OFF	SOAK (12 MIN)	PUMP (6 MIN)	RINSE (6 MIN)	OFF
0	LINE SWITCH																		
1	SPIN DIR																		
2	SPIN DIR																		
3	SPIN DIR																		
4	AGITATE DIR																		
5	AGITATE DIR																		
6	AGITATE DIR																		
7	AGITATE DIR																		
8	ADV. SOAK-WASH																		
9	SPIN DIR																		
10	ADV. SOAK-WASH																		
11	SPIN DIR																		
12	AGITATE DIR																		
13	AGITATE DIR																		
14	AGITATE DIR																		
15	AGITATE DIR																		
16	AGITATE DIR																		
17	AGITATE DIR																		
18	AGITATE DIR																		
19	AGITATE DIR																		
20	AGITATE DIR																		
21	AGITATE DIR																		
22	AGITATE DIR																		
23	AGITATE DIR																		
24	AGITATE DIR																		

CAUTION: DISCONNECT ELECTRIC CURRENT BEFORE SERVICING

