

Before Operating Your Dryer

Read your dryer **Owner's Guide**. It has important safety and warranty information. It also has many suggestions for best drying results.

⚠ WARNING To reduce the risk of fire, electric shock, or injury to persons, read the **IMPORTANT SAFETY INSTRUCTIONS** in your dryer Owner's Guide before operating this appliance.

Operating Steps

Read **Drying Procedures** in your Owner's Guide. It explains these operating steps in detail.

1. **Prepare items for drying.**
2. **Check that lint screen is clean and in place.**
3. **Load the dryer.** If desired, add a dryer fabric softener sheet.
4. **Close the dryer door.**
5. **Set Dry Temperature and Cycle Signal controls.**

6. **Turn cycle selector clockwise to desired setting.**
7. **Start dryer.** Turn the Turn to Start control clockwise to ON. **Hold for 1-2 seconds and release.**
8. **When Cycle Signal control is on, a signal will sound at the end of the cycle.**
9. **Remove items immediately and hang or fold.**
10. **Clean lint screen after every load.**

Temperature Selection

Always follow directions on fabric care labels.

⚠ WARNING To avoid fire hazard, do not use heat to dry items containing feathers or down, foam rubber, plastics, or similarly textured, rubber-like materials. Use Air Fluff-No Heat setting only.

The **REGULAR-HIGH HEAT**, **PERM PRESS-MEDIUM HEAT**, and **KNITS/DELICATES-LOW HEAT** temperature settings may be used with any cycle setting. The **AIR FLUFF-NO HEAT** setting can be used only in the Timed Dry cycle.

AIR FLUFF-NO HEAT setting tumbles the load without heat. Use Air Fluff to freshen clothing, pillows or blankets, or to dust draperies.


Cycle Selection

Turn cycle selector clockwise to desired cycle and setting.

Each cycle ends with a cool down period. The heat automatically turns off and the load continues to tumble during the cool down period. This reduces wrinkling and makes items easier to handle during unloading.

Drying time varies depending on size and dampness of load, weight and fabric type. Room temperature and humidity, type of installation and electrical voltage or gas pressure can also affect drying time.

(continued, reverse side)

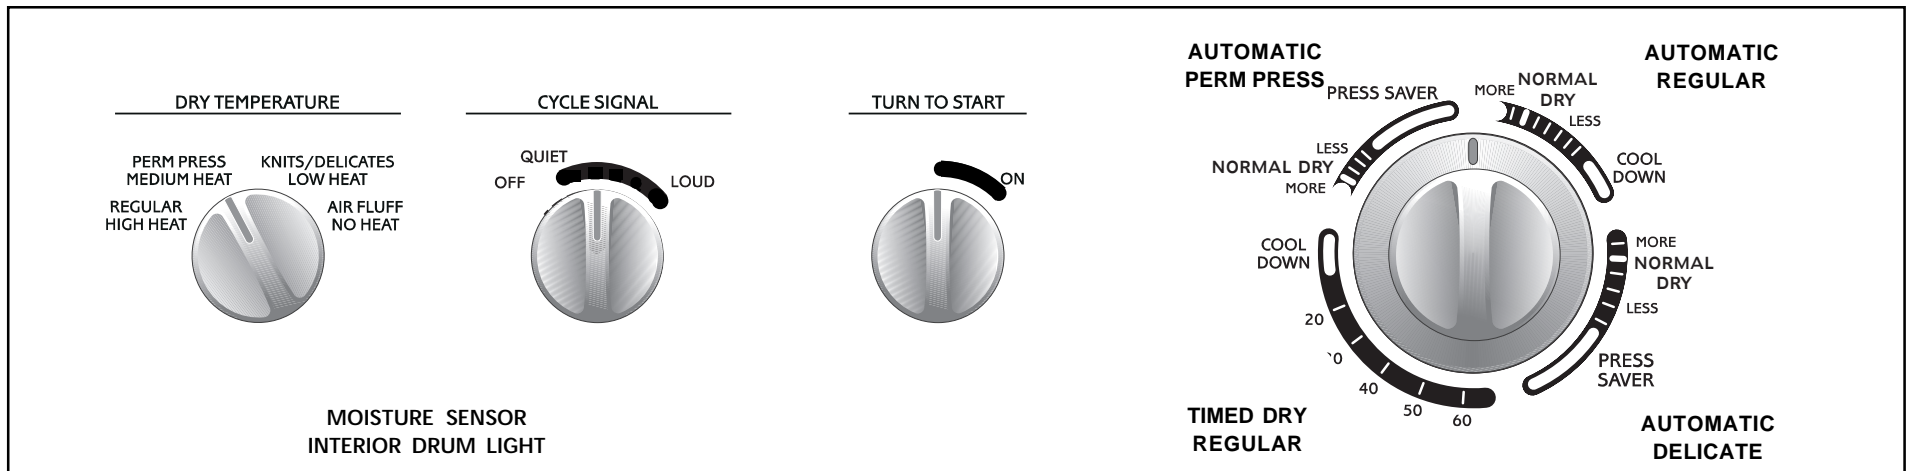

Cycle Selection (continued)

Automatic Regular Cycle

This cycle is best for cotton items that can be tumble dried. Drying time is determined automatically at the temperature selection of your choice.

- Set cycle selector on **NORMAL DRY**.
- For items requiring more drying time, set cycle selector on **MORE**.
- For items requiring less drying time, set cycle selector on **LESS**.

Automatic Delicate Cycle

This cycle is best for knit and delicate items. Drying time is determined automatically at the temperature selection of your choice.

- Low heat is suggested for knit and delicate items.
- Set cycle selector on **NORMAL DRY**.
- For items requiring more drying time, set cycle selector on **MORE**.
- For items requiring less drying time, set cycle selector on **LESS**.
- If the dried load cannot be removed promptly, the cycle selector will advance to the **Press Saver** setting.

- Unheated tumbling continues during the **Press Saver** for 22 minutes to help reduce wrinkling.
- When the Cycle Signal is on, it will sound briefly every 5 minutes as a reminder to remove the load.

Timed Dry Regular Cycle

This cycle provides up to 65 minutes of drying time at the temperature selection of your choice.

Automatic Perm Press Cycle

This cycle is best for permanent press items. Drying time is determined automatically at the temperature selection of your choice.

- Medium heat is suggested for permanent press items.
- Set cycle selector on **NORMAL DRY**.
- For items requiring more drying time, set cycle selector on **MORE**.
- For items requiring less drying time, set cycle selector on **LESS**.
- If the dried load cannot be removed promptly, the cycle selector will advance to the **Press Saver** setting.
- Unheated tumbling continues during the **Press Saver** for 22 minutes to help reduce wrinkling.

- When the Cycle Signal is on, it will sound briefly every 5 minutes as a reminder to remove the load.

Energy Saving Tips

- Keep the lint screen clean and exhaust the dryer correctly.
- Sort laundry properly and select proper temperature and cycle settings. Choose an automatic dry cycle whenever possible for accurate drying time.
- Dry only full loads. Single items and small loads usually take longer to dry.
- Avoid overloading, adding wet items to a partially dry load, and overdrying.
- Dry one load after another to take advantage of a warm dryer.
- Opening the door needlessly causes warm air to escape, which prolongs drying time.
- If possible, use the dryer on low humidity days.
- Install the dryer in an area where the room temperature is at least 45°F (7°C).