


2	Product Registration
2	Versión en español
2	Energy Saving Ideas
3	Important Safety Instructions
4	First Steps
5	Setting the Temperature Control
5-6	Freezer Features
6-7	Care and Cleaning
7	Power Failure/Freezer Failure
7	Food Storage Guide for 0°
8-9	Avoid Service Checklist
10	U.S. Warranty
11	Canada Service Information
12	Canada Warranty

## Product Registration

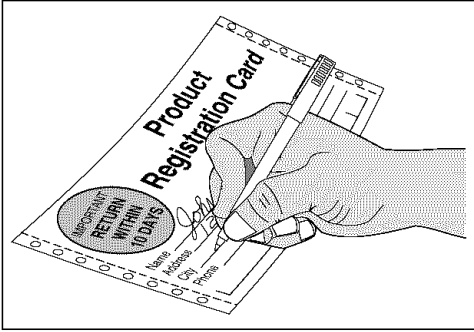

This Owner's Guide provides operating instructions for your model. Use your freezer only as instructed in this Owner's Guide.

### Versión en español

Si desea obtener una copia en español de este Manual del Usuario, sírvase escribir a la dirección que se incluye a continuación. Solicite la P/N216490000.

Spanish Owner's Guides  
Frigidaire Company  
P. O. Box 9061  
Dublin, Ohio 43017-0961

The information contained in this **Owner's Guide** will instruct you on how to properly operate and care for your product. Please read through the information contained in your literature pack to learn more about your new appliance.

### Record Your Model and Serial Numbers

Record the Model No. and Serial No. of this freezer in the space provided below.

Model No. \_\_\_\_\_

Serial No. \_\_\_\_\_

### Register Your Product

The self-addressed PRODUCT REGISTRATION CARD (shown left) should be filled in completely, signed and returned to the Frigidaire Company. In Canada, return to Frigidaire Canada.

## Energy Saving Ideas



- Freezer should be installed in the coolest area of the room, away from heat producing appliances or heating ducts, and out of direct sunlight.
- Let hot foods cool to room temperature before placing in freezer. Overloading the freezer forces compressor to run longer. Foods that freeze too slowly may lose quality or spoil.
- Be sure to wrap foods properly and wipe containers dry before placing them in freezer. This cuts down on inside frost build-up.
- Freezer shelves and baskets should not be lined with aluminum foil, wax paper, or paper toweling. Liners interfere with cold air circulation, making freezer less efficient.
- Organize and label food to reduce door openings and extended searches. Remove as many items as needed at one time, and close door as soon as possible.


# Important Safety Instructions

## **⚠ WARNING** Proper Freezer Disposal

**IMPORTANT:** Child entrapment and suffocation are not problems of the past. Junked or abandoned freezers are still dangerous— even if they will sit for “just a few days.” If you are getting rid of your old freezer, please follow the instructions below to help prevent accidents.

### **BEFORE YOU THROW AWAY YOUR OLD FREEZER:**

- \*Remove doors.
- \*Leave shelves in place so children may not easily climb inside.

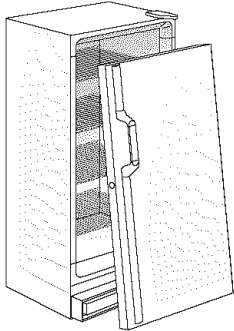


**⚠ WARNING** Avoid fire hazard or electric shock. Do not use an extension cord or an adapter plug. Do not remove any prong from the power cord.

Grounding type wall receptacle



Do not under any circumstances cut, remove, or bypass the grounding prong from this plug.

Power supply cord with 3-prong grounding plug

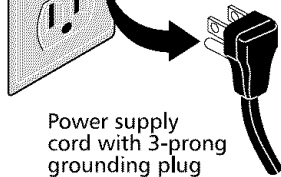

Read all instructions before using this freezer.

## **⚠ WARNING** For Your Safety

Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance. Read product labels for flammability and other warnings.

## **⚠ WARNING** Child Safety

- Destroy carton, plastic bags, and any exterior wrapping material immediately after freezer is unpacked. Children should never use these items for play. Cartons covered with rugs, bedspreads, plastic sheets or stretch wrap may become airtight chambers and can quickly cause suffocation.
- A child might suffocate if he crawls into a freezer to hide or play. Remove freezer door when not in use, even if you plan to discard freezer. Many communities have laws requiring you to take this safety precaution.

## **⚠ WARNING** Electrical Information

*These guidelines must be followed to ensure that safety mechanisms in the design of this freezer will operate properly.*


- Refer to serial plate for correct electrical rating. Appliance power cord is equipped with a three-prong grounding plug for protection against shock hazards. It must be plugged directly into its own properly grounded three-prong receptacle, protected with a 15 amp time delay fuse or circuit breaker. Receptacle must be installed in accordance with local codes and ordinances. Consult a qualified electrician. Receptacles with Ground Fault Circuit Interrupters (GFCI) are NOT RECOMMENDED.
- If voltage varies by 10 percent or more, freezer performance may be affected. Operating freezer with insufficient power can damage motor. Such damage is not covered under warranty. If you suspect your household voltage is high or low, consult your power company for testing.
- To prevent freezer from being turned off accidentally, do not plug unit into an outlet controlled by a wall switch or pull cord.
- Do not pinch, knot, or bend power cord in any manner.

## **⚠ WARNING** Other Precautions

- Never unplug freezer by pulling on power cord. Always grip plug firmly and pull straight out from receptacle.
- Turning the control to OFF turns off compressor, but does not disconnect power to other electrical components.

## First Steps

Before starting freezer, follow these important first steps:

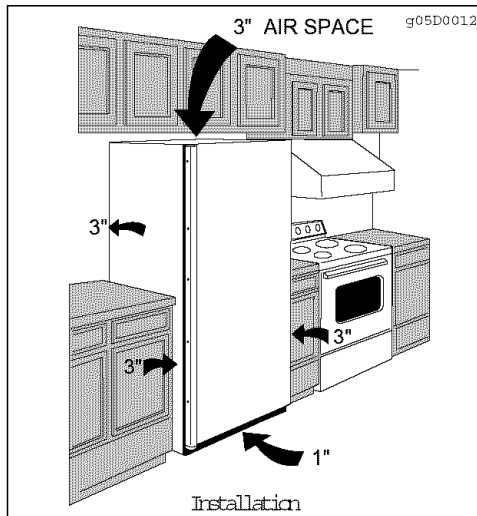


### Installation

- Choose a place that is near a grounded electrical outlet.
- For the most efficient operation, freezer should be located where surrounding temperatures will not exceed 110°F (43°C). Temperatures of 32°F (0°C) and below will NOT affect freezer operation. Additional compressor heaters are not recommended.
- Allow space around unit for good air circulation. Leave a 3 inch (75 mm) space on all sides of freezer for adequate circulation.

### Unpacking and Leveling

Freezer must have all bottom corners resting firmly on a solid floor. Floor must be strong enough to support a fully loaded freezer. Check cabinet with a level from side to side. After discarding crating screws and wood base, level the cabinet. Once leveled, slightly raise adjustment of front feet, so door closes easily when opened about halfway.

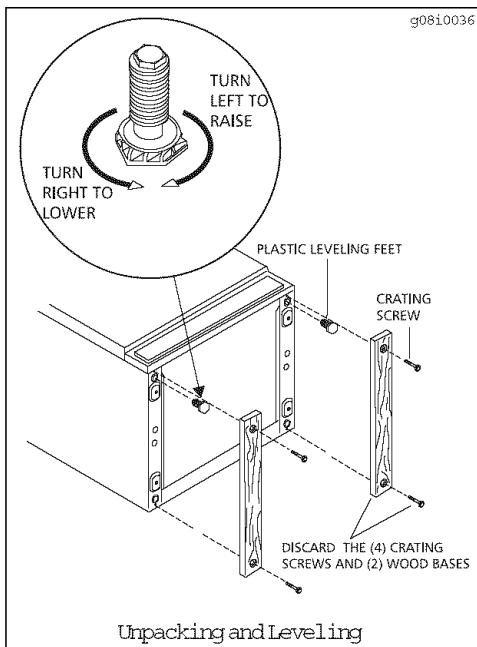

### Cleaning

- Wash any removable parts, freezer interior and exterior with mild detergent and warm water. Wipe dry. **DO NOT USE HARSH CLEANERS ON THESE SURFACES.**
- Do not use razor blades or other sharp instruments, which can scratch appliance surface, when removing adhesive labels. Any glue left from the tape can be removed with a mixture of warm water and mild detergent, or touch glue with the sticky side of tape already removed. **DO NOT REMOVE SERIAL PLATE.**

### Freezer Door Removal




If door must be removed:

1. Lift up plastic hinge cover and fold back.
2. Use a Phillips® screwdriver to loosen and retighten the screws on the top hinge to insure a secure assembly and prevent hinge slippage.
3. Remove top hinge from cabinet, and lift door off lower hinge pin.
4. After door is removed, remove the two screws from the bottom hinge.
5. To replace door, reverse above order.


### Door Adjustment

If door gasket does not seal, adjust screw on bottom edge of door:

- If door does not seal on top, see Figure A.
- If door does not seal on bottom, see Figure B.

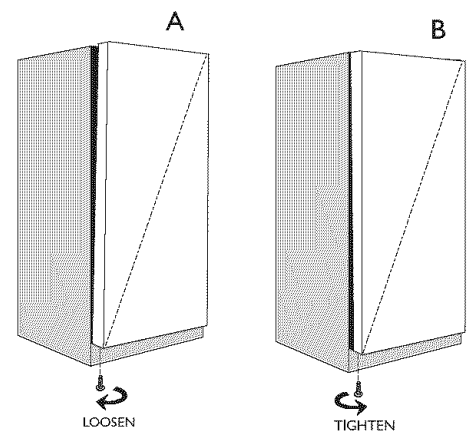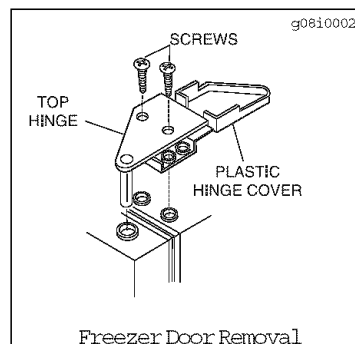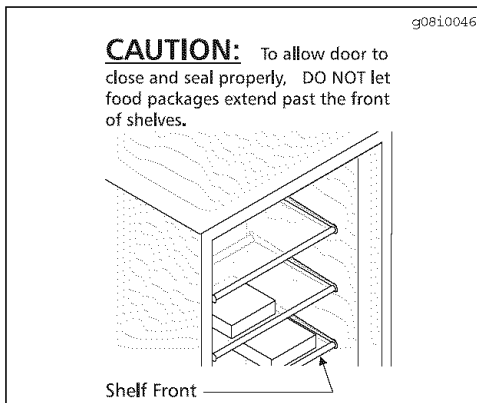

## Setting the Temperature Control

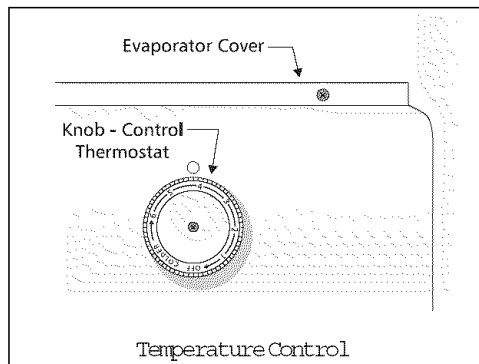


### Cool Down Period

- For safe food storage, allow 4 hours for freezer to cool down completely. Freezer will run continuously for the first several hours. Foods that are already frozen may be placed in freezer after the first few hours of operation. Unfrozen foods should NOT be loaded into freezer until freezer has operated for 4 hours.
- When loading freezer, freeze only 3 pounds of fresh food per cubic foot of freezer space at one time. Store food packages evenly throughout freezer. It is not necessary to turn control knob to a colder setting while freezing food.

### Temperature Control

The temperature control is located inside freezer, on right back wall. The temperature control should be factory pre-set to number 4, which will provide satisfactory food storage temperatures. However, the temperature control is adjustable to provide a range of temperatures for your satisfaction. If a colder temperature is desired, turn temperature control knob to a higher number. Adjust by one numerical increment at a time, and allow several hours for temperatures to stabilize between adjustments.

## Freezer Features

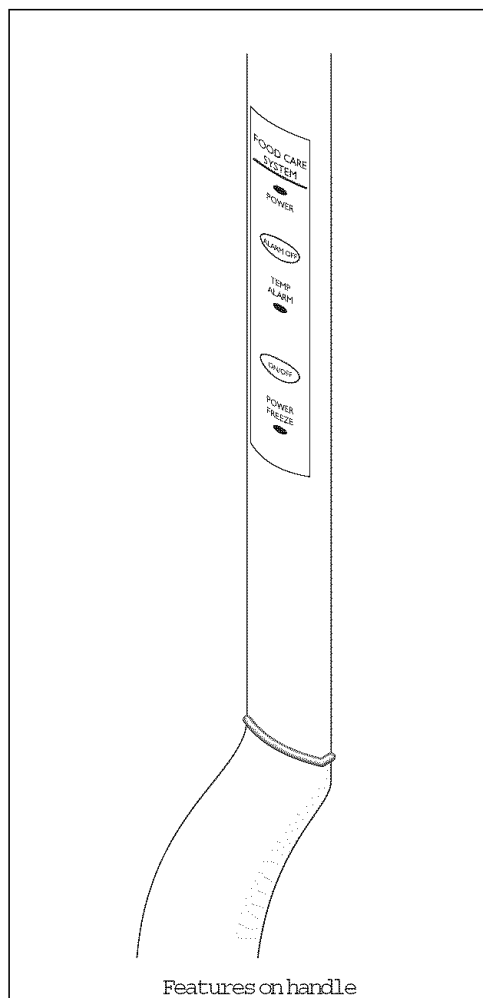

### Power On Light

The Power On Light indicates that the freezer is properly connected to electrical power. The light glows even when the temperature control is turned to OFF. If the light goes out, refer to "Freezer does not run" in the Avoid Service Checklist.

### Temp Alarm (some models)

This feature is designed to provide a warning if the inside temperatures reach an unsafe level. The Temp. Alarm Feature operates on household electricity. It will not function if household electricity is interrupted.

When the freezer is initially plugged in, the red Temp. Alarm Indicator Light blinks. The indicator light will continue to blink until the freezer has reached a safe freezing temperature. If a malfunction causes an unsafe temperature inside the freezer, the red light will blink and the buzzer will sound. To silence the buzzer, press the ALARM OFF button. The Indicator Light will continue to blink until a safe freezing temperature is again reached.

If the ALARM OFF button is not pressed, the buzzer will turn itself off automatically after 48 hours, but the red Temp Alarm Light will continue to blink.

### Temp Alarm Indicator Light

### Function

Light out, silent buzzer

Normal operation.

Blinking RED light, silent buzzer


Initial installation or extended power outage indicates warm temperature.

Blinking RED light, buzzer sounding

Warm temperature condition. To silence buzzer, press TEMP. ALARM OFF button. See "Avoid Service Checklist" for possible problems.

## Freezer Features

(continued)

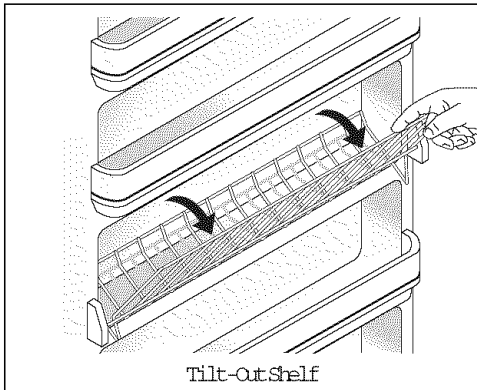

### Power Freeze


To activate the Power Freeze feature, push the switch to the ON position. The green light will appear, and the freezer will run continuously, driving freezer temperature to the coldest possible temperatures. The switch automatically turns off after 24 hours. Use this feature just prior to adding large quantities of unfrozen foods (not to exceed 3 pounds per cubic foot of freezer space).

### Two Tilt-Out Shelves

These shelves, located inside on the freezer door, provide additional storage space. To access an item, tilt top of "basket" shelf down.

### Two Slide-Out Baskets

The Slide-Out Baskets, at the bottom of the freezer, provide separate storage space for items that are difficult to store on freezer shelves. To remove basket, pull out and lift up.

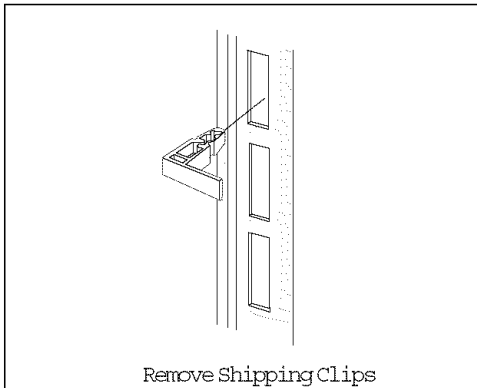

### Two Juice Can Racks


The Juice Can Racks on the freezer door are specially ridged to store juice cans, and prevent them from rolling out of shelf.

### Security Lock with Pop-Out Key

This security lock on door, fastens door snugly, ensuring stored food is secure. To lock or unlock freezer, push key into lock, and turn. Key pops out of lock after it has been turned.

### Interior Light

The light comes on automatically when door is opened. To replace light bulb, turn temperature control to OFF, and unplug electrical cord. Replace old bulb with a bulb of the same wattage.

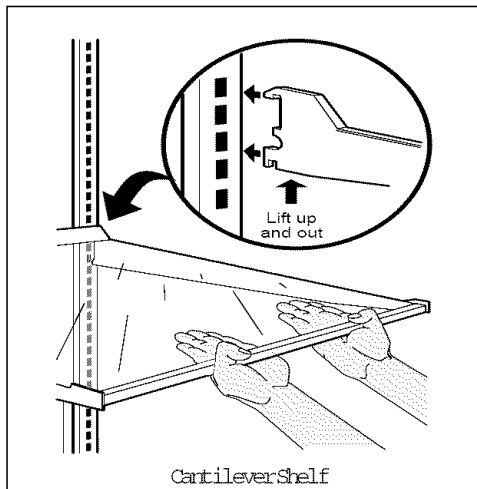

### Three Adjustable Cantilever Shelves

These shelves can be moved to any position. Lift shelf up and out to move to desired position.

### Shelf Adjustment

Freezer shelves are easily adjusted to suit your needs. Before adjusting shelves, remove all food. Remove and discard shipping clips wedged into cantilever rail above shelf hook. These clips stabilize the shelves during shipping.

To adjust cantilever shelves (supported at the rear of the freezer) lift back of shelf up and out. Replace shelf by inserting rear hooks into slots. Lower and lock into position.

## Care and Cleaning

**WARNING** Damp objects stick to cold metal surfaces. Do not touch interior metal surfaces with wet or damp hands.

Keep your freezer clean to prevent odor build-up. Wipe any spills immediately, and clean at least twice a year.

### Cleaning the Inside

Wash inside freezer surfaces with a solution of two tablespoons of baking soda in one quart (1.136 litres) warm water. Rinse and dry. Wring excess water out of sponge or cloth when cleaning in the area of the controls, or any electrical parts.

Wash removable parts and door gasket with baking soda solution mentioned above, or mild detergent and warm water. Rinse and dry.

**Never** use metallic scouring pads, brushes, abrasive cleaners, or alkaline solutions on any surface. Do not wash removable parts in a dishwasher.

## Care and Cleaning

(continued)

**⚠ WARNING** If leaving freezer door open while on vacation, make certain that children cannot get into freezer and become entrapped.

## Cleaning the Outside

Wash cabinet with warm water and mild liquid detergent. Rinse well and wipe dry with a clean soft cloth. Replace parts and food.

## Vacation and Moving Tips

**Short Vacations:** Leave freezer operating during vacations of less than three weeks.

**Long Vacations:** If freezer will not be used for several months, remove all food and unplug power cord. Clean and dry interior thoroughly. To prevent odor and mold growth, leave freezer door open slightly, blocking it open if necessary.

**Moving:** Disconnect power cord plug from wall outlet. Remove foods, then defrost and clean freezer. Secure all loose items such as base panel, baskets, and shelves by taping them securely in place to prevent damage. In the moving vehicle, secure freezer in an upright position, and secure to prevent movement. Also protect outside of freezer with a blanket, or similar item.

## Power Failure/Freezer Failure

Do not open freezer door unnecessarily if freezer is off for several hours.


If a power failure occurs, frozen foods will stay frozen for at least 24 hours if freezer is kept closed. If power failure continues, pack seven or eight pounds of dry ice into freezer every 24 hours. Look in Yellow Pages under "Dry Ice," "Dairies," or "Ice Cream Manufacturers" for local dry ice suppliers. Always wear gloves and use caution when handling dry ice.

If freezer has stopped operating, see "Freezer does not run" in the Avoid Service Checklist Section of this manual. If you cannot solve the problem, call an authorized service immediately.





If freezer remains off for several hours, follow directions above for using dry ice during a power failure. If necessary, take food to a local locker plant until freezer is ready to operate. Look in Yellow Pages under "Frozen Food Locker Plants."


## Food Storage Guide for 0°

Refer to your food storage guide for storage information.



### FRIGIDAIRE FOOD STORAGE GUIDE FOR 0°F

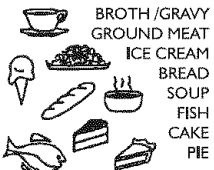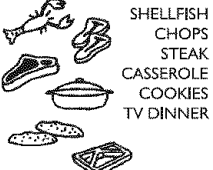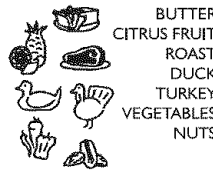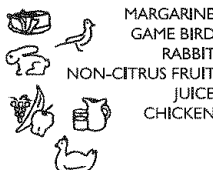1-2 MONTHS	3-4 MONTHS	5-7 MONTHS	8-12 MONTHS
 <p>BROTH /GRAVY GROUND MEAT ICE CREAM BREAD SOUP FISH CAKE PIE</p>	 <p>SHELLFISH CHOPS STEAK CASSEROLE COOKIES TV DINNER</p>	 <p>BUTTER CITRUS FRUIT ROAST DUCK TURKEY VEGETABLES NUTS</p>	 <p>MARGARINE GAME BIRD RABBIT NON-CITRUS FRUIT JUICE CHICKEN</p>

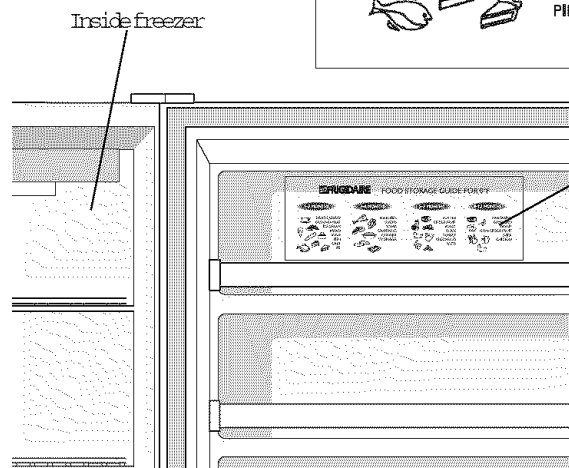

## Avoid Service Checklist

Before calling for service, review this list. It may save you both time and expense. This list includes common occurrences that are not the result of defective workmanship or materials in this appliance.

### OCCURRENCE

### SOLUTION

#### **FREEZER DOES NOT RUN**

Check to be sure freezer is not plugged into a circuit that has ground fault interrupt. If you are unsure about the outlet, have it checked by a certified technician.

Temperature control is in the OFF position. See Setting the Temperature Control Section.

Freezer may not be plugged in, or plug may be loose. Be sure plug is tightly pushed into electrical outlet.

House fuse has blown, or circuit breaker has tripped. Check/reset circuit breaker, or replace fuse with 15 amp. time delay fuse.

Power outage. Check house lights. Call local electric company.

#### **Freezer runs too much or too long.**

Room or outside weather is hot. It is normal for the freezer to work harder under these conditions.

Freezer had recently been disconnected for a period of time. Freezer requires 4 hours to cool down completely.

Large amounts of warm or hot food have been stored recently. Warm food will cause the freezer to run more until the desired temperature is reached.

Door is kept open too long or too frequently. Warm air enters the freezer every time the door is opened. Open the door less often.

Freezer door may be slightly open. See Occurrence "Door Problems."

Temperature control is set too cold. Turn the control knob to a warmer setting. Allow several hours for the temperature to stabilize.

Freezer gasket is dirty, worn, cracked, or poorly fitted. Clean or change gasket. Leaks in the door seal will cause freezer to run longer in order to maintain desired temperature.

#### **Temperatures inside freezer are too cold.**

Temperature control is set too cold. Turn the control to a warmer setting. Allow several hours for the temperature to stabilize.

#### **Temperatures inside freezer are too warm.**

Temperature control is set too warm. Turn the control to a colder setting. Allow several hours for the temperature to stabilize.

Door is kept open too long or is opened too frequently. Warm air enters the freezer every time the door is opened. Open the door less often.

Door may be open slightly. See Occurrence section "Door Problems."

Large amounts of warm or hot food might have been stored recently. Wait until the freezer has had a chance to reach its selected temperature.

Freezer has recently been disconnected for a period of time. Freezer requires 4 hours to cool down completely.

#### **Temperature of external freezer surface is warm.**

The exterior freezer walls can be as much as 30°F warmer than room temperature. This is normal while the compressor works to transfer heat from inside the freezer cabinet.

### **SOUND AND NOISE**

#### **Louder sound levels whenever freezer is on.**

Modern freezers have increased storage capacity and more even temperatures. They require a high efficiency compressor. When the surrounding noise level is low, you might hear the compressor running while it cools the interior.

#### **Louder sound levels when compressor comes on.**

Freezer operates at higher pressures during the start of the ON cycle. This is normal. Sound will level off or disappear as freezer continues to run.

#### **Popping or cracking sound when compressor comes on.**

Metal parts undergo expansion and contraction, as in hot water pipes. This is normal. Sound will level off or disappear as freezer continues to run.



OCCURRENCE	SOLUTION
<b>SOUND AND NOISE (cont'd)</b>	
<b>Bubbling or gurgling sound, like water boiling.</b>	Refrigerant (used to cool freezer) is circulating throughout system. This is normal.
<b>Vibrating or rattling noise.</b>	Freezer is not level. It rocks on the floor when it is moved slightly. Level unit. Refer to "Leveling" in First Steps Section.
<b>WATER/MOISTURE/FROST INSIDE FREEZER</b>	Freezer is touching the wall. Relevel the freezer or move freezer slightly. Refer to "Leveling" in the First Steps Section.
<b>Moisture forms on inside freezer walls.</b>	Weather is hot and humid, which increases internal rate of frost build-up. This is normal. Door is slightly open. See Occurrence "Door Problems."
<b>WATER/MOISTURE/FROST OUTSIDE FREEZER</b>	Door is kept open too long, or is opened too frequently. Open the door less often.
<b>Moisture forms on outside of freezer.</b>	Door is slightly open, causing cold air from inside freezer to meet warm moist air from outside. See "Door Problems" under Occurrence.
<b>ODOR IN FREEZER</b>	Interior needs to be cleaned. Clean interior with sponge, warm water, and baking soda. Foods with strong odors are in freezer. Cover food tightly.
<b>DOOR PROBLEMS</b>	
<b>Door will not close.</b>	Freezer is not level. It rocks on floor when it is moved slightly. This condition can force cabinet out of square and misalign door. Refer to "Leveling" in First Steps Section.
<b>LIGHT BULB IS NOT ON</b>	Light bulb is burned out. Follow directions under "Interior Light" in Freezer Features Section. No electric current is reaching freezer. See Occurrence "Freezer Does Not Run."

# FRIGIDAIRE GALLERY FREEZER WARRANTY - United States

Your Frigidaire product is protected by this warranty

	WARRANTY PERIOD	FRIGIDAIRE, THROUGH ITS AUTHORIZED SERVICERS, WILL:	THE CONSUMER WILL BE RESPONSIBLE FOR:																		
<b>FULL TWO-YEAR WARRANTY</b>	Two year from original purchase date.	Pay all costs for repairing or replacing any parts of this appliance which prove to be defective in materials or workmanship.	Costs of service calls that are listed under <b>NORMAL RESPONSIBILITIES OF THE CONSUMER</b> . *																		
<b>LIMITED 3RD - 5TH YEAR WARRANTY (Sealed System)</b>	Third through fifth years from original purchase date.	Repair or replace any parts in the Sealed Refrigeration System (compressor, condenser, evaporator, drier and tubing) which prove to be defective in materials or workmanship, and provide the labor to install such part.	Diagnostic costs and any removal, transportation and reinstallation costs which are required because of service. Costs for labor, parts and transportation other than with respect to the Sealed Refrigeration System.																		
<b>LIMITED 6TH - 10TH YEAR WARRANTY (Compressor only)</b>	Sixth through tenth years from original purchase date.	Provide a replacement for any compressor which proves to be defective in materials or workmanship.	Diagnostic costs and any removal, transportation and reinstallation costs which are required because of service. Costs for labor, parts and transportation other than the cost of the replacement compressor itself.																		
<b>LIMITED WARRANTY (Applicable to the State of Alaska)</b>	Time periods listed above.	All of the provisions of the full and limited warranties above and the exclusions listed below apply.	Costs of the technician's travel to the home and any costs for pick up and delivery of the appliance required because of service.																		
<b>THREE-YEAR LIMITED FOOD SPOILAGE PLAN</b>	During the first three years from original purchase date.	If food loss results because of defects in materials or workmanship during the time periods listed above, and applies to the limitations stated in the normal responsibilities of the consumer listed below, Frigidaire will reimburse the consumer for the actual food spoilage loss in excess of \$5.00 per occurrence, but not to exceed the maximum payment in the schedule at right, provided the food losses: A) Are reported and the food shown to any Frigidaire authorized servicer within 24 hours of the discovery of the loss. B) Are not occasioned by either the manual disconnection of the electrical power within the premises of the owner or a general power failure.	<p>Occur even though the owner exercised reasonable care and diligence to save food per suggestions furnished with the appliance.</p> <table border="1"> <thead> <tr> <th colspan="3">MAXIMUM PAYMENT SCHEDULE</th> </tr> <tr> <th>Size - Cubic Foot</th> <th>Cumulative</th> <th>Maximum</th> </tr> </thead> <tbody> <tr> <td>.5-9.9</td> <td></td> <td>\$100</td> </tr> <tr> <td>10.0-16.5</td> <td></td> <td>\$150</td> </tr> <tr> <td>16.6-21.5</td> <td></td> <td>\$200</td> </tr> <tr> <td>21.6+</td> <td></td> <td>\$250</td> </tr> </tbody> </table>	MAXIMUM PAYMENT SCHEDULE			Size - Cubic Foot	Cumulative	Maximum	.5-9.9		\$100	10.0-16.5		\$150	16.6-21.5		\$200	21.6+		\$250
MAXIMUM PAYMENT SCHEDULE																					
Size - Cubic Foot	Cumulative	Maximum																			
.5-9.9		\$100																			
10.0-16.5		\$150																			
16.6-21.5		\$200																			
21.6+		\$250																			

Your appliance is warranted by Frigidaire Company, a division of White Consolidated Industries, Inc. We authorize no person to change or add to any of our obligations under this warranty. Our obligations for service and parts under this warranty must be performed by Frigidaire Company Consumer Services or an authorized Frigidaire servicer.

## \* NORMAL RESPONSIBILITIES OF THE CONSUMER

This warranty applies only to products in ordinary household use, and the consumer is responsible for the items listed below:

1. Proper use of the appliance in accordance with instructions provided with the product.
2. Proper installation by an authorized servicer in accordance with instructions provided with the appliance and in accordance with all local plumbing, electrical and/or gas codes.
3. Proper connection to a grounded power supply of sufficient voltage, replacement of blown fuses, repair of loose connections or defects in house wiring.
4. Expenses for making the appliance accessible for servicing, such as removal of trim, cupboards, shelves, etc., which are not a part of the appliance when it was shipped from the factory.
5. Damages to finish after installation.
6. Replacement of light bulbs and/or fluorescent tubes (on models with these features).

## EXCLUSIONS

This warranty does not cover the following:

1. CONSEQUENTIAL OR INCIDENTAL DAMAGES SUCH AS PROPERTY DAMAGE AND INCIDENTAL EXPENSES RESULTING FROM ANY BREACH OF THIS WRITTEN OR ANY IMPLIED WARRANTY.  
*Note: Some states do not allow the exclusion or limitation of incidental or consequential damages, so this limitation or exclusion may not apply to you.*
2. Service calls which do not involve malfunction or defects in workmanship or material, or for appliances not in ordinary household use. The consumer shall pay for such service calls.
3. Damages caused by services performed by persons other than authorized Frigidaire servicers; use of parts other than Frigidaire Company Genuine Renewal Parts; obtained from persons other than such servicers; or external causes such as abuse, misuse, inadequate power supply or acts of God.
4. Products with original serial numbers that have been removed or altered and cannot be readily determined.

## IF YOU NEED SERVICE

Keep your bill of sale, delivery slip, or some other appropriate payment record. The date on the bill establishes the warranty period should service be required. If service is performed, it is in your best interest to obtain and keep all receipts. This written warranty gives you specific legal rights. You may also have other rights that vary from state to state. Service under this warranty must be obtained by following these steps, in order:

1. Contact Frigidaire Company Consumer Services or an authorized Frigidaire servicer.
2. If there is a question as to where to obtain service, contact our Consumer Relations Department at:

Frigidaire Company  
P.O. Box 7181  
Dublin, Ohio 43017  
(800) 944-9044



Product features or specifications as described or illustrated are subject to change without notice. All warranties are made by White Consolidated Industries, Inc. This warranty applies only in the 50 states of the U.S.A. and Puerto Rico.

## Service Information in Canada Only

To avoid unnecessary cost and inconvenience, make a few simple checks before calling for service. Common occurrences and their solutions can be found in the Avoid Service Checklist. Be sure you have followed the instructions in this manual.

If you are unable to locate the cause of a problem, call for service. Insist on factory service by an authorized FRIGIDAIRE PARTS AND SERVICE depot.

### **FRIGIDAIRE PARTS AND SERVICE**

All Frigidaire appliances are backed by FRIGIDAIRE PARTS AND SERVICE, one of Canada's largest parts and service networks.

The Frigidaire reputation means you can enjoy complete professional service from one of our hundreds of trained technicians across the country.

#### **FRIGIDAIRE PARTS AND SERVICE**

866 Langs Drive  
Cambridge, Ontario  
N3H 2N7

Place the name, address and telephone number of your service depot in the spaces below.

---

---

---

---

*Product and feature specifications as described or illustrated are subject to change without notice.*



**GALLERY FREEZER  
WARRANTY in Canada**

**WARRANTOR :**

Frigidaire Canada  
866 Langs Drive  
Cambridge, Ontario  
N3H 2N7

For service under this warranty, contact your local dealer/retailer, authorized FRIGIDAIRE PARTS AND SERVICE depot, or :

**FRIGIDAIRE PARTS AND SERVICE**

866 Langs Drive  
Cambridge, Ontario  
N3H 2N7  
Tel: (519) 653-0095  
Fax: (519) 653-5761

**WARRANTY PERIOD :**

For two years after purchase by the original consumer/owner :

For five years after purchase by the original consumer/owner :

For ten years after purchase by the original consumer/owner .

**WARRANTOR WILL THROUGH ITS AUTHORIZED SERVICE DEPOT :**

Pay cost to repair or replace any defective parts (including service and labour charge) .

Pay cost (including service and labour charge) to repair or replace defective parts of the sealed refrigeration system consisting of the compressor, evaporator, condenser, interconnecting tubing, drier and refrigeration charge.

Pay cost (excluding service and labour charge) to replace a defective motor compressor .

**FREEZER FOOD SPOILAGE PLAN**

In addition, in the event of loss of food due to spoilage as a result of a mechanical failure or an inoperative component of the freezer due to faulty workmanship or materials, the following freezer food spoilage plan applies. The cumulative total responsibility, as outlined below, shall not be exceeded for any given freezer.

Type of freezer	Plan period	Frigidaire will pay	Consumer/Owner will pay
5 cu. ft./142 litres to 11.9 cu. ft./337.1 litres	1st through 5th year after date of purchase by original consumer/owner	Accumulative total of up to \$200.	First \$25 of each claim
12.0 cu. ft./340 litres to 23.0 cu. ft./651.5 litres	1st through 5th year after date of purchase by original consumer/owner	Accumulative total of up to \$400.	First \$25 of each claim

Claim forms may be obtained from your local dealer/retailer, authorized FRIGIDAIRE PARTS AND SERVICE depot or from the office shown above and must be submitted to the warranty department within thirty (30) days of the loss.

Where a claim is submitted under the Freezer Food Spoilage Plan, such claim constitutes a waiver by the consumer/owner of any other right to remedy to which he/she is otherwise entitled by law with respect to the loss of food due to spoilage as a result of mechanical failure or an inoperative component of the freezer due to faulty workmanship or materials.

**WARRANTY APPLIES TO :**

- a) Products purchased and installed in Canada for personal single family household use.
- b) Defects resulting or arising out of the manufacturing process.
- c) Products bearing legible manufacturer's model and serial numbers.
- d) Replacement parts only for the remainder of the original warranty.

**WARRANTY DOES NOT APPLY TO :**

- a) Transportation damage.
- b) Supply and replacement of porcelain, fuses, glass and light bulbs.
- c) Parts and service supplied or obtained from other than FRIGIDAIRE PARTS AND SERVICE or FRIGIDAIRE PARTS AND SERVICE authorized depots.
- d) Damage or failure as the result of abuse, improper or commercial use.

**CONSUMER/OWNER RESPONSIBILITY :**

- a) To provide proof of the original date of purchase by means of a bill of sale or payment record verifying purchase date.
- b) To pay all costs to make the appliance readily accessible for service.
- c) To ensure proper power supply and connection of the appliance to same.
- d) Proper installation, control setting and care of finish.

This warranty is in addition to any statutory warranties contained in any applicable legislation. The terms and conditions of this warranty are not intended to exclude or limit your rights under those statutes. The warrantor however reserves the right to charge transportation and travelling costs for distances in excess of 48 kilometres (30 miles) from the nearest FRIGIDAIRE PARTS AND SERVICE authorized service depot.

This warranty plus the statutory warranties mentioned are the only warranties given to the consumer/owner for this product.



Notes