




30" Freestanding Electric Range

PRODUCT MODEL NUMBERS

GR395LXG	RF340BXH	RF366PXG
GR396LXG	RF340BXX	RF367LXX
GR399LXG	RF341BXH	RF368LXX
GR399LXH	RF341BXX	RF370PXG
RF196LXJ	RF350BXX	RF374PXG
RF196LXX	RF350PXH	RF376LXG
RF199LXH	RF352BXX	RF377PXG
RF3020XG	RF355PXK	RF378LXX
RF3020XK	RF361PXK	RF378PXG
RF302BXG	RF362BXG	RF379LXX
RF302BXX	RF362BXX	RF380LXX
RF303PXK	RF364BXG	RF385PXG
RF314PXG	RF364LXX	RF386PXG
RF314PXK	RF364PXK	RF387LXH
RF315PXG	RF365PXG	RF388LXG
RF315PXK	RF365PXK	
RF325PXG	RF366LXX	

Electrical: Use 8-gauge solid copper wire. A four-wire or three-wire, single-phase, 120/240-volt, 60-Hz, AC-only, electrical supply is required on a 40-ampere circuit, (or, if specified on the model/serial rating plate, a four-wire or three-wire, single-phase 120/208-volt, 60 Hz, AC-only electrical supply is available, a 40-ampere circuit), fused on both sides of the line. A time-delay fuse or circuit breaker is recommended. The model/serial rating plate is located on the oven frame behind the drawer.

OVERALL DIMENSIONS

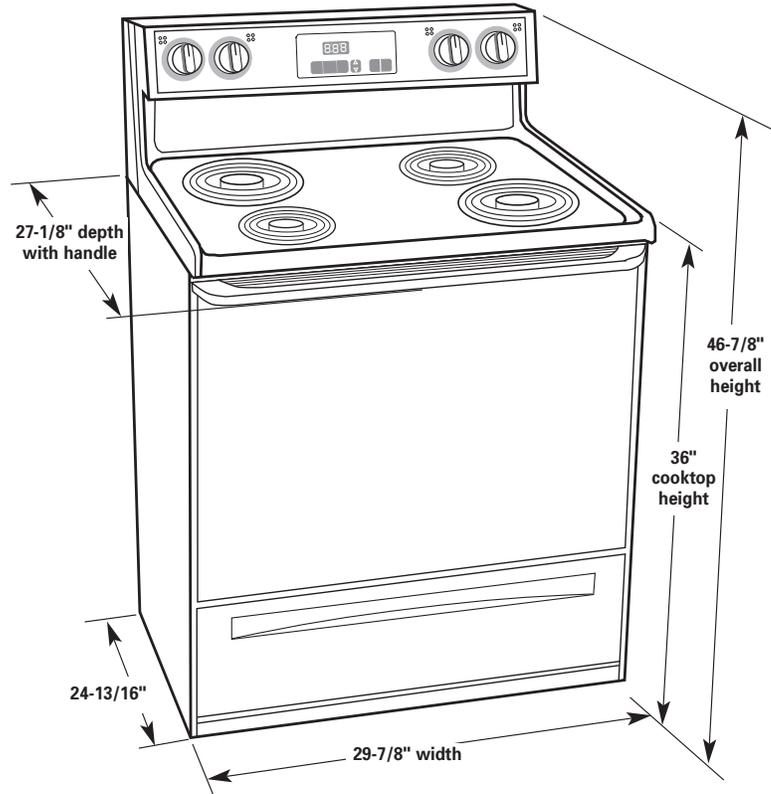

CABINET OPENING DIMENSIONS

