

OPERATING INSTRUCTIONS

1. Clean lint screen before each use.
2. Load laundry and shut door.
3. Set controls.
4. Push "start" button.

See instructions for Operating,
Safety, and Service Information.

PART NO. 3394996 Rev. B

BEFORE CALLING FOR ASSISTANCE OR SERVICE:

IF DRYER WON'T START

- Is door closed tightly?
- Is power cord plugged in?
- Have home fuses blown or is circuit breaker tripped? (Electric dryer has two) (Gas dryer has one)
- Is control set to a cycle?

TIPS FOR BETTER DRYING

- Was dryer overloaded?
- Is lint screen full? Clean it.
- Is exhaust duct blocked? Clean it.
- Adjust dryness control for "more" or "less."
- Select settings which best match load.
- Timed cycle requires a minimum of 15 minutes.
- Check both home circuit breakers or both fuses. (Electric dryer only)
- Is gas turned on? (Gas dryer only)