 
 


OPERATING INSTRUCTIONS

WASH/RINSE TEMPERATURE

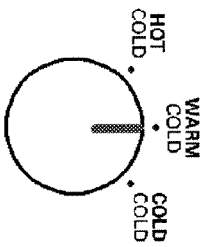 


LOAD SIZE

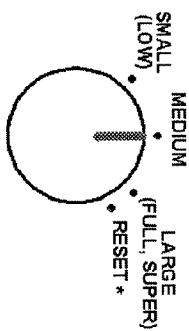

* Some Models

KNITTS & DELICATES

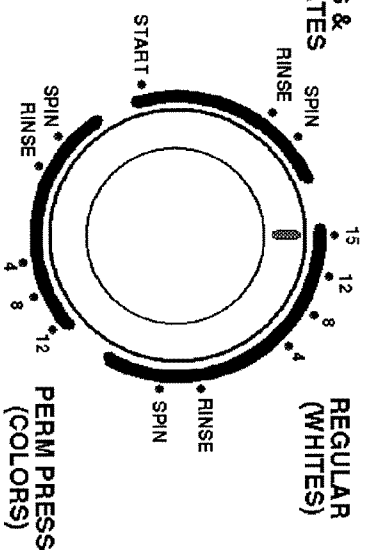

Versión en español

Si desea obtener una copia en español de estas Instrucciones de Funcionamiento, sírvase escribir a la dirección que se incluye a continuación. Solicite la P/N 131919600.

Spanish Owner's Guides
Frigidaire Home Products
P. O. Box 212378
Augusta, GA 30917

Before Operating Your Washer

Read your washer Owner's Guide. It has important safety and warranty information. It also has many suggestions for best washing results.

⚠️ WARNING To reduce the risk of fire, electric shock, or injury to persons, read the **IMPORTANT SAFETY INSTRUCTIONS** in your washer Owner's Guide before operating this appliance.

Printed in U.S.A.

Operating Steps

Read Washing Procedures in your Owner's Guide. It explains these operating steps in detail.

1. Sort laundry into loads that can be washed together.
2. Prepare items for washing.
3. Pretreat stains and heavy soil.
4. Add the measured amount of detergent to wash tub.
5. If desired, add diluted liquid bleach to the Bleach Dispenser on some models. For models without a dispenser, add diluted bleach after the tub has filled and the load has agitated a few minutes. **DO NOT** pour bleach directly onto wash load.
6. Add laundry load to wash tub.

7. If desired, add liquid fabric softener to the Fabric Softener Dispenser on some models or during the final rinse.

8. Set cycle selector and washer controls according to type, size, and soil level of each load.
9. Close lid and pull cycle selector knob to start washer.
10. Remove items at end of cycle. Wait about 1 minute for safety lid lock to release.

Cycle Selection

Always follow instructions on fabric care labels.

The Regular/Whites, PermPress/Colors and Knits/Delicates cycles provide a spray rinse during the first spin, followed by a deep rinse and final spin.

 
Regular/Whites Cycle

Provides up to 15 minutes of wash agitation for most fabrics.


(continued, reverse side)

P/N 131919500 (9911)

WASH/RINSE TEMPERATURE

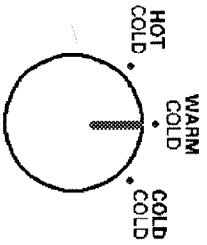


LOAD SIZE

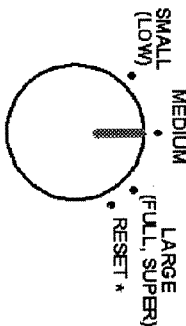 

* Some Models

 KNITS & DELICATES

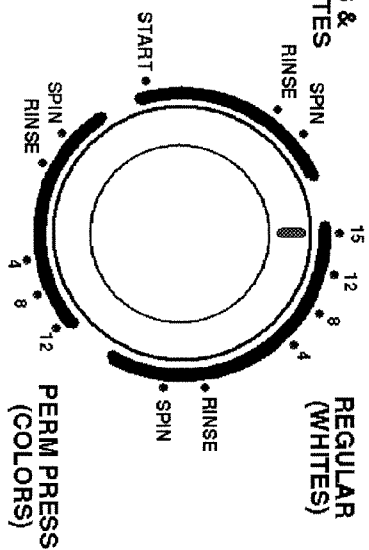

Cycle Selection (continued)

Perm Press/Colors Cycle

Provides up to 12 minutes of wash agitation for cottons and blends with a no-iron finish.

Knits/Delicates Cycle

Provides 8 minutes of wash/pause agitation for the gentle care of knit and delicate items. Always set the Knits/Delicates cycle to begin at the START position.

Controls

Always follow instructions on fabric care labels.

WASH/RINSE TEMPERATURE sets the water temperatures for washing and rinsing. Select wash water temperature according to fiber content and soil level of the load, and type of detergent used. A cold water rinse saves energy and reduces wrinkling.

The following chart suggests wash/rinse temperatures for basic fabric types.

Fabric Type	Wash/Rinse Temperature
Heavily soiled white/colorfast cotton, perm press	Hot/Cold
Normally soiled white/colorfast cotton, perm press	Warm/Cold
Noncolorfast fabrics, knits, delicates, washable woolens	Cold/Cold

LOAD SIZE sets the amount of wash and rinse water for the wash load. Select a water level appropriate for the load size. There should be enough water for items to move freely.

- On some models, to increase water level after the wash cycle begins, turn the Load Size control to Reset and hold. When water begins to enter the tub, turn the control to the desired setting.

Energy Saving Tips

- Wash full loads. Oversize loads use extra energy. Undersize loads waste energy.
- When small wash loads cannot be avoided, use lower water levels.
- Select the appropriate cycle and time for each load. Shorten wash times for lightly soiled loads.
- To reduce drying time, select a fast spin speed to remove more water from heavy items such as towels and jeans.
- Use warm water to wash most loads. Limit hot water washes to heavily soiled and white loads. Use cold water for lightly soiled items and rinsing.
- Operate the washer in early morning and late evening when utility demands are low.
- Follow proper laundry procedures to avoid rewashing.

DRYER OPERATING INSTRUCTIONS

AUTOMATIC DRY **TIMED DRY** START

TEMPERATURE

Si desea obtener una copia en español de estas Instrucciones de Funcionamiento, sírvase escribir a la dirección que se incluye a continuación.
Solicite la P/N 131921600.
Spanish Owner's Guides
Frigidaire Home Products
P. O. Box 212378
Augusta, GA 30917

Versión en español

Before Operating Your Laundry Center

Read your laundry center Owner's Guide. It has important safety and warranty information. It also has many suggestions for obtaining the best drying results.

Center

Operating Steps

1. Prepare items for drying.
2. Check that lint screen is clean and in place.
3. Load the dryer. If desired, add a dryer fabric softener sheet.

4. Close the dryer door.

5. Set Temperature control.

6. Turn cycle selector clockwise to desired setting.

7. Start dryer. Push the Push to Start button for 2 seconds, or turn Turn to Start Knob to ON, hold for 2 seconds and release.

8. A signal will sound when the cycle ends.

9. Remove items immediately and hang or fold.

10. Clean lint screen after every load.

Temperature Selection

Always follow directions on fabric care labels.

The **REGULAR-HIGH HEAT**, **PERM PRESS-MEDIUM HEAT**, and **DELICATE-LOW HEAT** temperature settings may be used with any cycle setting. The **AIR FLUFF-NO HEAT** setting can be used only in the Time Dry cycle.

AIR FLUFF-NO HEAT setting tumbles the load without heat. Use Air Fluff to freshen clothing, pillows or blankets, or to dust draperies.

Auto Dry Cycle

This cycle is best for regular and permanent press items that can be tumble dried.

Drying time is determined automatically at the temperature selection of your choice. This cycle is best for items of similar fabric, weight and construction.

- For items requiring more drying time, set cycle selector on **MORE DRY**.
- For items requiring less drying time, set cycle selector on **LESS DRY**.

Time Dry Cycle

This cycle provides up to 100 minutes of drying time at the temperature selection of your choice.

Cycle Selection

Turn cycle selector clockwise to desired cycle and setting.

Each cycle ends with a cool down period. The heat automatically turns off and the load continues to tumble for 5-10 minutes. This reduces wrinkling and makes items easier to handle during unloading.

Drying time varies depending on size and dampness of load, weight and fabric type. Room temperature and humidity, type of installation and electrical voltage or gas pressure can also affect drying time.

Operating Steps

1. Prepare items for drying.
2. Check that lint screen is clean and in place.
3. Load the dryer. If desired, add a dryer fabric softener sheet.

Temperature Selection

Always follow directions on fabric care labels.

The **REGULAR-HIGH HEAT**, **PERM PRESS-MEDIUM HEAT**, and **DELICATE-LOW HEAT** temperature settings may be used with any cycle setting. The **AIR FLUFF-NO HEAT** setting can be used only in the Time Dry cycle.

AIR FLUFF-NO HEAT setting tumbles the load without heat. Use Air Fluff to freshen clothing, pillows or blankets, or to dust draperies.

WARNING To avoid fire hazard, do not use heat to dry items containing feathers or down, foam rubber, plastics, or similarly textured, rubber-like materials. Use the Air Fluff-No Heat setting only.

Cycle Selection

Turn cycle selector clockwise to desired cycle and setting.

Each cycle ends with a cool down period. The heat automatically turns off and the load continues to tumble for 5-10 minutes. This reduces wrinkling and makes items easier to handle during unloading.

Drying time varies depending on size and dampness of load, weight and fabric type. Room temperature and humidity, type of installation and electrical voltage or gas pressure can also affect drying time.

Auto Dry Cycle

 
 
This cycle is best for regular and permanent press items that can be tumble dried.

Drying time is determined automatically at the temperature selection of your choice. This cycle is best for items of similar fabric, weight and construction.

- For items requiring more drying time, set cycle selector on **MORE DRY**.
- For items requiring less drying time, set cycle selector on **LESS DRY**.

Time Dry Cycle

This cycle provides up to 100 minutes of drying time at the temperature selection of your choice.

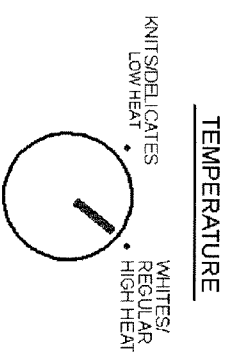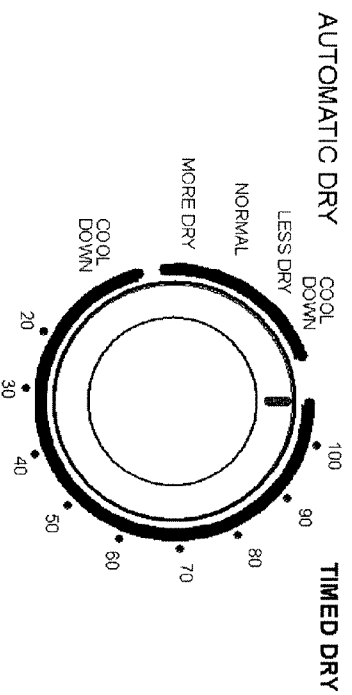

General Drying Guide

This is only a general guide. For best results, follow label directions on specific items to be dried.

Fabric Type	Select Cycle	Temperatures
Mixed Cottons and Linens	Timed Dry	Regular High Heat
Permanent Press	Auto Dry	Perm Press Medium Heat
Knits, Delicates, All Synthetics	Auto Dry	Knits/Delicates Low Heat
Plastic, Rubber Items, Dewrinkling and Air Out	Timed Dry	Air Fluff No Heat

Energy Saving Tips

- Keep the lint screen clean and exhaust the dryer correctly.
- Sort laundry properly and select proper temperature and cycle settings. Choose an automatic dry cycle whenever possible for accurate drying time.
- Dry only full loads. Single items and small loads usually take longer to dry.
- Avoid overloading, adding wet items to a partially dry load, and overdrying.
- Dry one load after another to take advantage of a warm dryer.
- Opening the door needlessly causes warm air to escape, which prolongs drying time.
- If possible, use the dryer on low humidity days.
- Install the dryer in an area where the room temperature is at least 45°F (7°C).