CAUTION: DISCONNECT ELECTRIC CURRENT BEFORE SERVICING

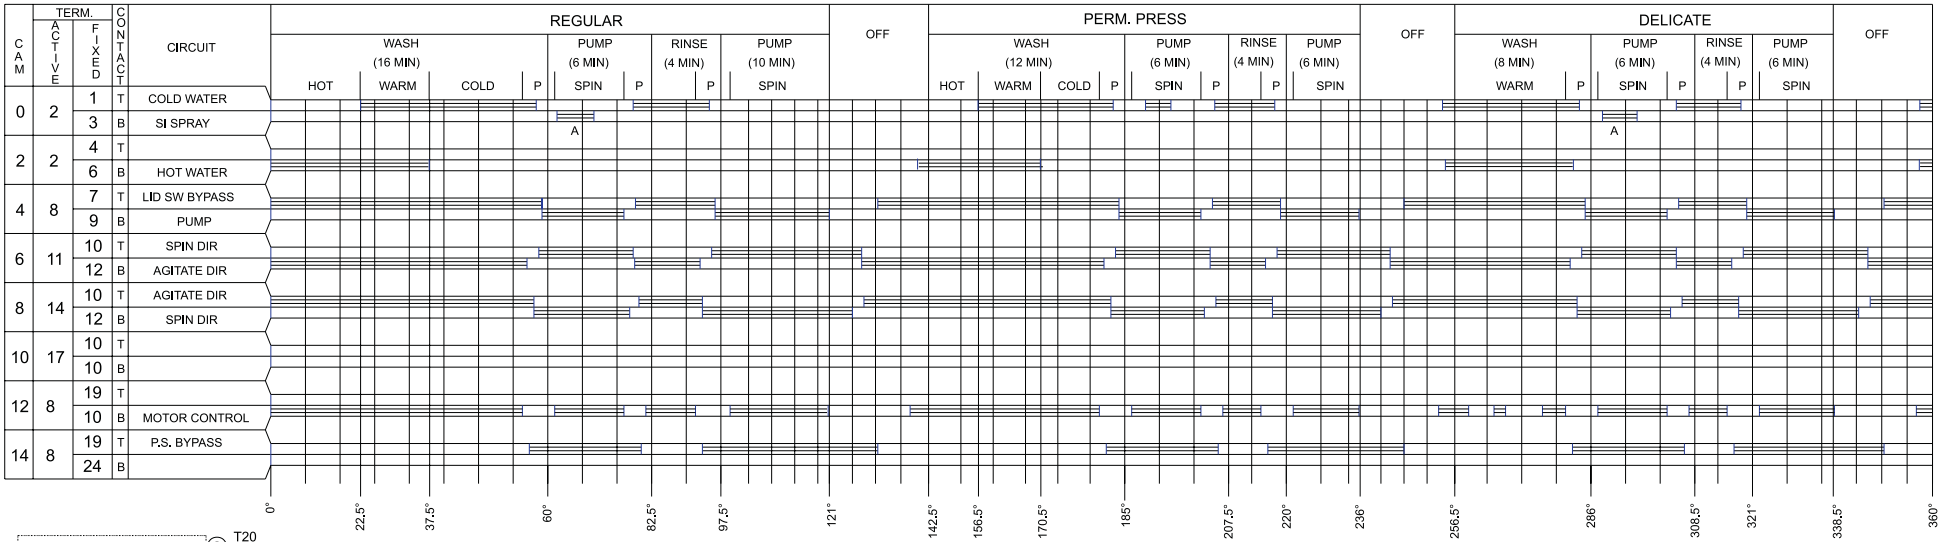

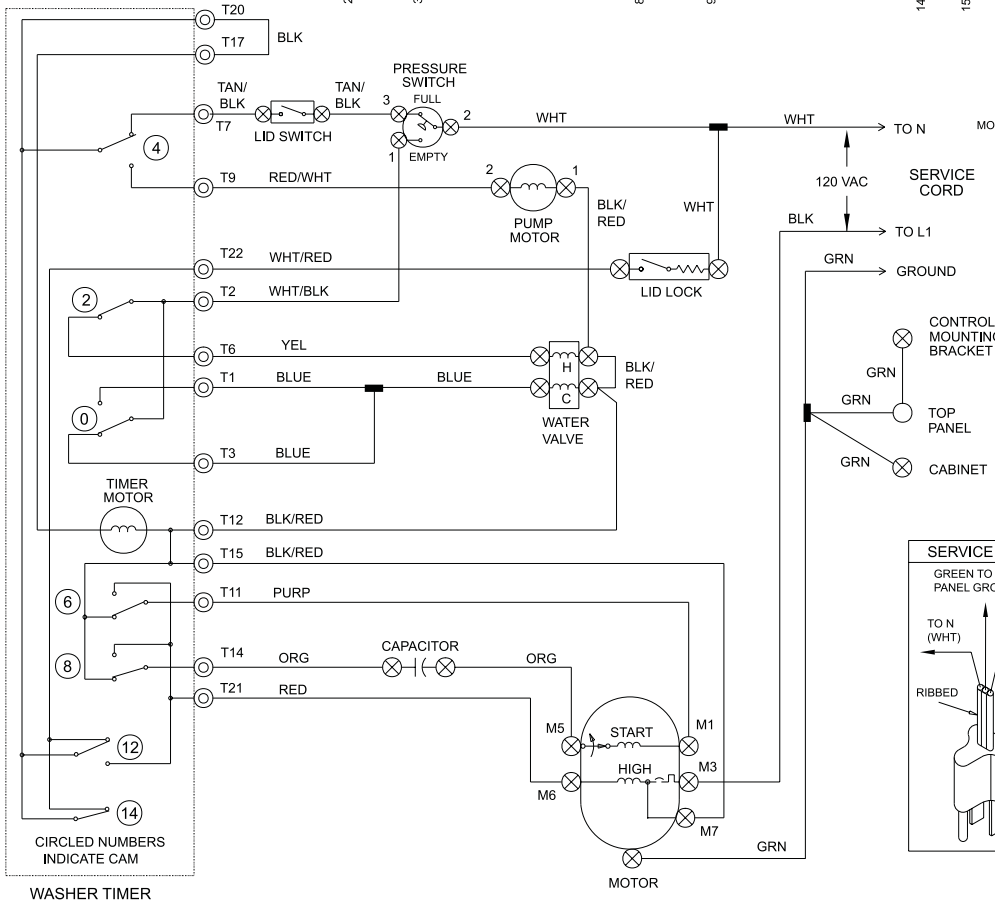

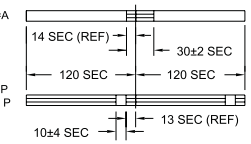

DETAIL FOR SPRAY SUBINTERVAL AND PAUSE FOR MOTOR AND PUMP CONTROL CIRCUITS.

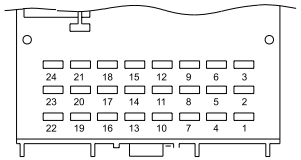

TIMER PLUG-MALE
(END VIEW)

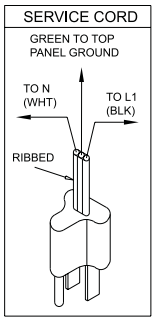

WIRING CODES
PLUG IN TIMER TERMINAL
QUICK DISCONNECT TERMINAL
SCREW TERMINAL
CONNECTION
NO CONNECTION
MOTOR SWITCH
SPLICE
MOTOR PROTECTOR
CHASSIS (CABINET) GROUND

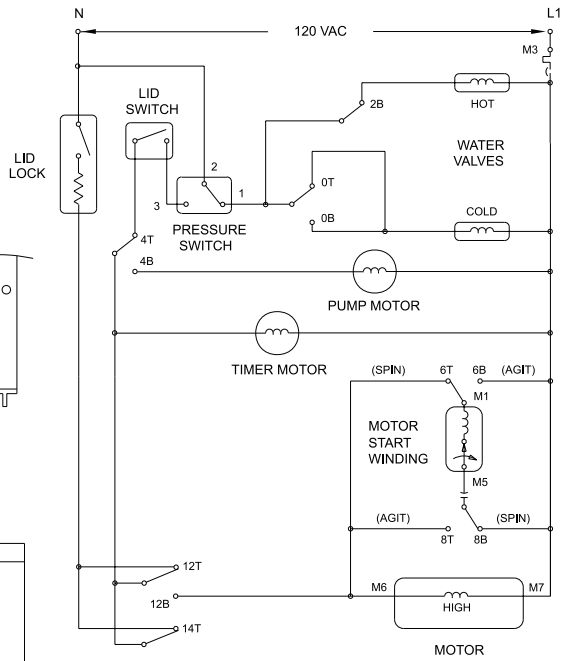

NOTE:
SUFFIX INDICATES TIMER SWITCH CONTACTS
T= TOP
B= BOTTOM

WIRING DIAGRAM
134128200