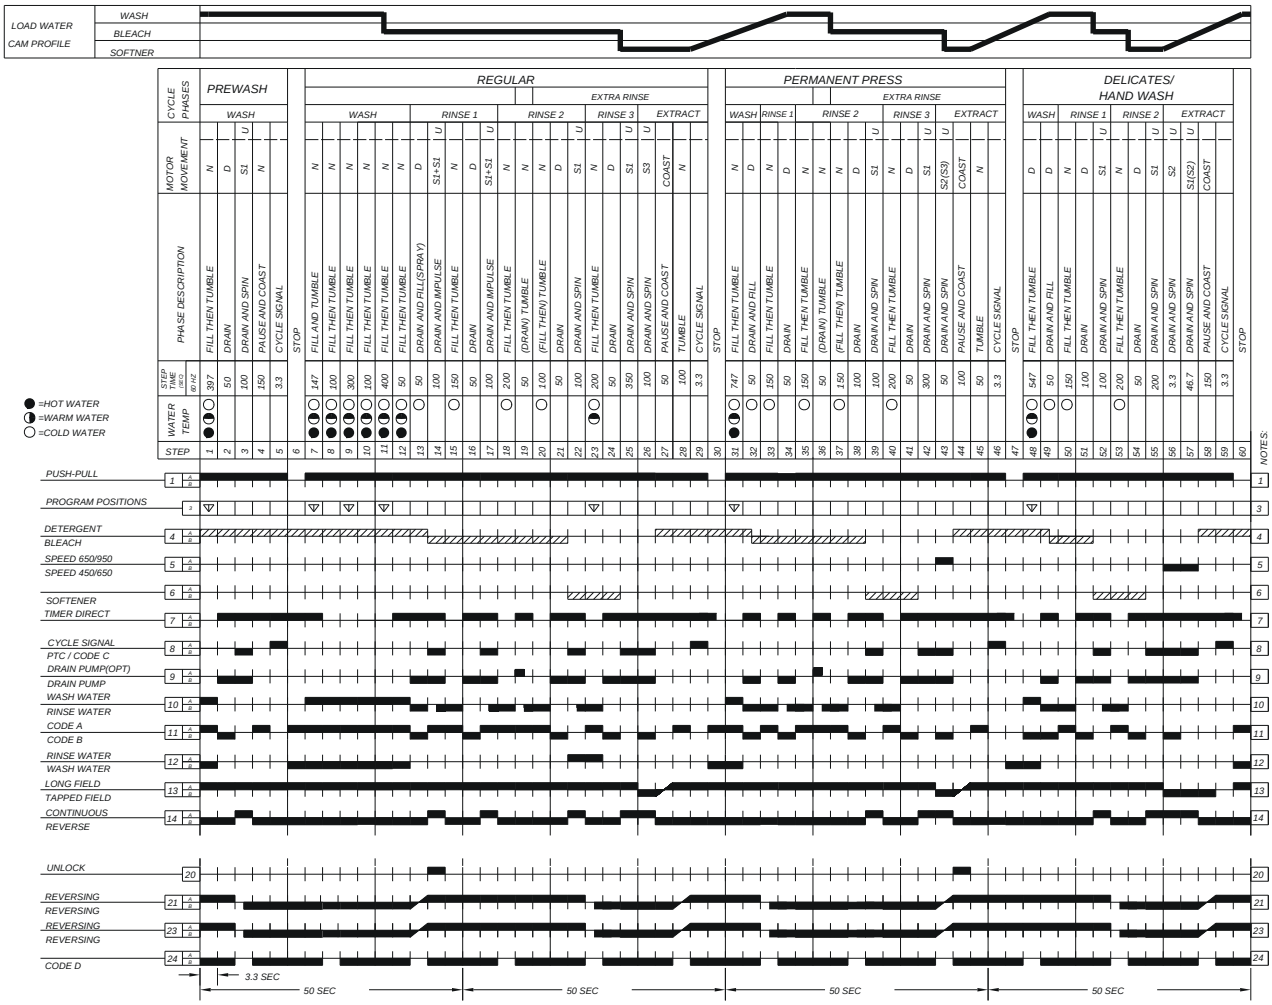

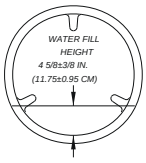

NO LOAD, START POSITION OF PERMANENT PRESS

SPEED CONTROL UNIT OPERATION

DRUM RPM	PHASE DESCRIPTION	CODE	E 5 A/B	D 24B	C 8B	B 11B	A 11A
0	NO ACTION	/	X	0	0	0	X
0	NO ACTION	/	X	X	0	0	0
0	NO ACTION	/	X	0	0	1	X
0	NO ACTION	/	X	X	0	1	1
0	NO ACTION	/	X	0	X	1	1
0	NO ACTION	/	X	X	1	1	1
52	AGIT - CONTINUOUS	N	X	1	0	0	1
52	AGIT - DUTY CYCLE	D	X	1	0	1	0
450	INTERVAL SPIN	S1+S1	X	X	1	0	1
450	SPIN - CONTINUOUS	S1	X	X	1	0	0
650	SPIN - CONTINUOUS	S2	1	X	1	1	0
950	SPIN - CONTINUOUS	S3	0	X	1	1	0

1=120 VAC 0=0 VAC X=DON'T CARE (1 OR 0)

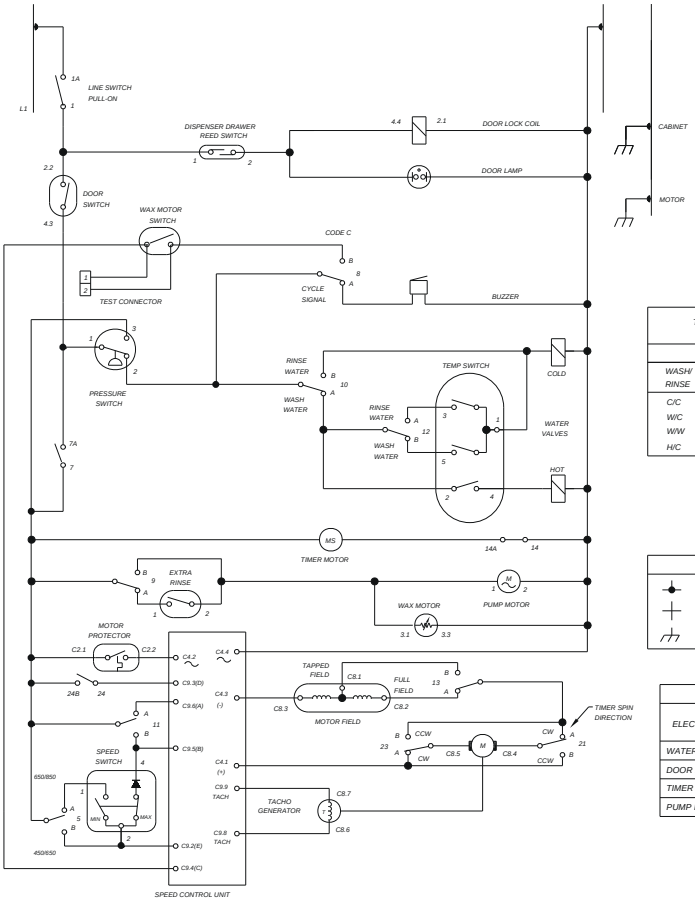

TEMPERATURE SWITCH			
CIRCUIT			
WASH/ RINSE	1-3	1-5	2-4
C/C		X	
W/C		X	X
W/W	X	X	X
H/C			X

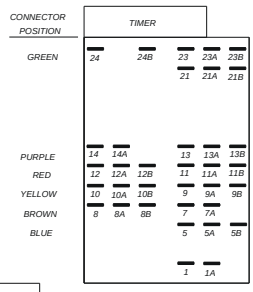

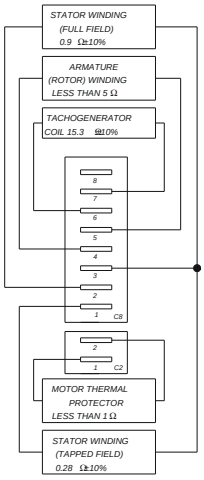

MOTOR CONNECTOR

WIRING CODES	
	CONNECTION
	NO CONNECTION
	CABINET GROUND

COMPONENT RESISTANCE TABLE	
ELECTRICAL COMPONENT	RESISTANCE Ω ± 10% @ 77°F(25°C)
WATER VALVE SOLENOIDS	880
DOOR LOCK SOLENOID	380
TIMER MOTOR	2070
PUMP MOTOR	4.6

⚠ WARNING TO REDUCE THE RISK OF ELECTRICAL SHOCK DISCONNECT THIS APPLIANCE FROM THE POWER SUPPLY BEFORE ATTEMPTING ANY USER MAINTENANCE. TURNING THE CONTROLS TO THE OFF POSITION DOES NOT DISCONNECT THIS APPLIANCE FROM THE POWER SUPPLY.

WIRING DIAGRAM

P/N 131806900