

LEGEND

- SW. - SWITCH
- O.C. - OVEN CONTROL
- S.S. - SELECTOR SWITCH
- R.F. - RIGHT FRONT
- R.R. - RIGHT REAR
- L.F. - LEFT FRONT
- L.R. - LEFT REAR
- S.L.S. - SURFACE LAMP SWITCH
- O.L.S. - OVEN LAMP SWITCH
- P.L. - PILOT LIGHT
- A.D.S. - AUTO. DOOR SWITCH
- T.P. - THERMAL PROTECTOR
- SM.T. - SMOOTH TOP
- QBF - QUICK BAKE FAN
- QB SW. - QUICK BAKE SW.

COLORS

- BK. BLACK
- W. WHITE
- O. ORANGE
- BR. BROWN
- G. GREEN
- R. RED
- Y. YELLOW
- BL. BLUE

CODE

STYLE


CODE	GAUGE/CAL.	TEMP. °C	CSA	UL
1	10	150	EXL-150	3321
2	12	150	EXL-150	3321
3	14	150	EXL-150	3321
4	14	150	EXL-150	3321
5	18	150	EXL-150	3321
6	14	125	CL1251	3173
7	16	125	CL1251	3173
8	18	125	CL1251	3173
9	16	200	SEW-1	3122

UNIT RATING

RATED VOLTAGE : 240 V.

OVEN ELEMENTS	WATTS	OHMS
	+5% & -10%	
BAKE	2400	24
	3000	19.2
BAKE	3400	14.2
BROIL	2750	20.8

SEE CONNECTOR

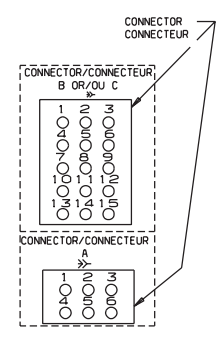

LEGEND	CONDITION	OVEN CONTROL					P. L. OVEN
		L1-1	B-4	B-3	L-BR	L-BA	
ON	OFF	0	0	0	0	0	0
X =	BAKE	Cy	X	0	0	X	Cy
	BROIL	Cy	X	0	X	0	Cy
O =	TIMED BAKE	Cy*	0	X	0	X	Cy*
	DELAY						
	OPTIONAL						
	* AFTER DELAY						

NOTE:
COMPONENTS SHOWN ARE NOT NECESSARILY USED ON ALL MODELS.

CAUTION: DISCONNECT CURRENT BEFORE REMOVING REAR COVER.

318045087 REV. B